

Installation Manual V10.1

SAM Series 2-Wire and 3-Wire Clock

 




SAM Series 2-Wire and 3-Wire Clocks - Table of Contents

Interactive Hyperlinked PDF – Click on the topic and the document will go to the relevant page. Clicking on the logo will take you back to the table of contents.

```
Table of Contents 2
Important Safety Instructions 3
Identify Your Clock 4
Wall Mount Installation - Round Metal Clock 5-8
    - Round SlimLine Clock 9 - 12
    - Round Aluminum/Wood Clock 13 - 17
    - Square Clock 18 - 21
Flag Mount Installation - Round Metal Clock 22 - 29
    - Round SlimLine/Aluminum Clock 30 - 37
    - Square Clock 38 - 44
Double Mount Installation - Round Metal Clock 45 - 51
    - Round SlimLine/Aluminum Clock 52 - 57
    - Square Clock 58 - 64
Legacy Housing 65
Wiring Information - 2-Wire Digital Communication 66
    - 3-Wire Synchronous (Sync-Wire) Communication 115/230VAC 67
    - 3-Wire Synchronous (Sync-Wire) Communication 24VAC 68
Frequently Asked Ouestions 69
Questions about Protocols 70
Troubleshooting 71
Diagnostic #1 - Protocol Verification 72
Diagnostic #2 - Comprehensive Test 73
Diagnostic #3 - Manufacturing Default 74
Warranty 75
```



P. (+1) 215.322.6063 F. (+1) 215.322.8498 www.sapling-inc.com



Important Safety Instructions

VERY IMPORTANT:

KNOW YOUR COMMUNICATION PROTOCOL

This clock is designed to support the 2-Wire Digital Communication Protocol as well as 3-wire (sync-wire) communication protocols. To run either system properly, the clock requires the correct wiring format. It is very important that you only follow the wiring instructions appropriate to your clock's communication protocol. For example: if your system includes converter boxes which are only used for the 2-wire system, then you should only follow the instructions that relate to the 2-wire digital communication protocol wiring.



DANGER



SHOCK HAZARD

- Keep the electricity to this device turned OFF until the clock installation is complete.
- Do not expose the clock movement to water, or install the clock in a location where it may be exposed to water.

NOTICE

- Do not install the clock outdoors.
 Damage to the clock if placed outdoors voids the warranty.
- Do not hang objects from the clock or clock mounting parts. The clocks are not designed to support the weight of other objects.
- The clock face and housing may be cleaned with a damp cloth or disinfectant. Test other cleaning products on a small part of the clock housing before attempting to use on the rest of the clock. Avoid bleach and chemicals known to dissolve plastics.



WARNING



FIRE HAZARD

- Always follow your national and regional electrical codes or ordinances.
- The AC power circuit for the clock must be attached to a circuit breaker that can be reset by the user.




PHYSICAL INJURY HAZARD

- If you are standing on an object while installing your clock, make sure that the object can support your weight, and will not sway or move as you stand on it.
- Take precautions to avoid injury by potential safety hazards near the point of installation including (but not limited to) heavy machinery, sharp objects, hot surfaces, or exposed cables carrying an electric current.
- Follow all mounting instructions exactly as stated in this manual. Failure to do so may result in the device falling off the point of installation.
- Packaging materials and mounting items include plastic bags and small pieces, which pose a suffocation hazard to young children.



Identify Your Clock

A label containing the part number of your clock is attached to the clock movement.

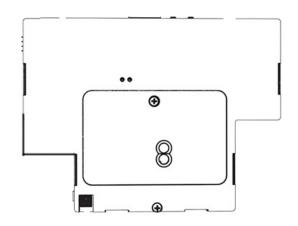

If your part number begins with SAM-1, you own a METAL clock
If your part number begins with SAM-4, you own a SLIMLINE or SQUARE clock
If your part number begins with SAM-5 you own an ALUMINUM clock
If your part number begins with SAM-6 you own a WOOD clock

Example part numbers:

SAM-1BS-16R-1	(METAL clock)
SAM-4BS-12S-4	(SQUARE clock)
SAM-4BS-12R-4	(SLIMLINE clock)
SAM-5AS-09R-1	(ALUMINUM clock)
SAM-6DS-12R-2	(WOOD clock)



Included in Package


Description	Quantity	Picture
Metal analog clock	1	
Mounting Bracket 12": M-MB-12-4 16": M-MB-16-2 Included in Wiring Kit (A-PK-12-2A)	1	
Power/grounding wires and connector	1	
#6-32x1/2 screw	2	
M4-0.5x10	2	
#10x1.5 Self-tapping screw	1	
Wall anchor	1	
Additional grounding wire with connector	1	

PLEASE NOTE: A user will also have to provide a Phillips-head screwdriver, a small slot-head screwdriver, a drill with a 1/4 inch drill bit, a pencil, a single gang box, any equipment needed to install the gang box, and any additional wiring needed to extend the signal, power, or ground cables.


If any of the items listed in the wiring kit are missing, you may contact your dealer and order a replacement kit.



1) Install the single gang box in the wall. Leave at least 17 inches between the bottom of the gang box and ceiling. Confirm that the bottom of the gang box is level with the floor.

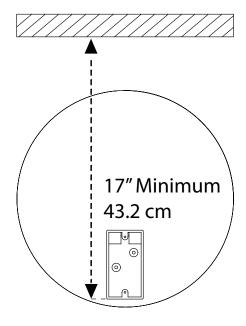

3) Attach the communication, power, and grounding wires from your kit to the communication and power wires in the gang box. See the Wiring Guide included later in this manual for additional details.

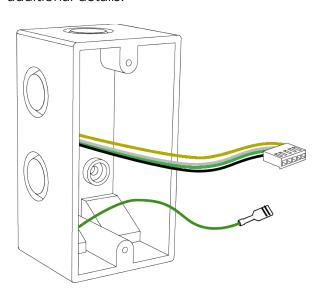

2) Run power and communication wiring to the gang box. See the sections of this manual labeled "Wiring Information" for additional details, depending on your system.


If you are using a 2-wire system, pull the YELLOW and GREEN wires out of the connector.

CHECK YOUR WIRING

The voltage between the white and black wires should measure 105-126 volts AC in the 115 volt model, 207-253 volts AC in the 230 volt model, or 21.5-26.5 volts AC in the 24 volt model.


If you are using the 24 volt model, make sure that the wiring leading to the clock is from an ISOLATED transformer.

4) Use the #6-32x1/2 screws to attach the mounting bracket to the gang box. The gang box should be at the bottom of the mounting piece.

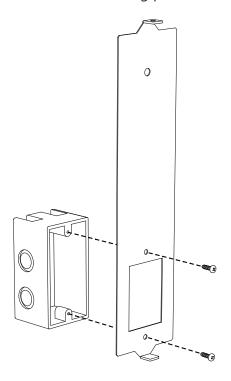





5) Use the pencil to mark the location of the large, circular hole at the top of the mounting bracket. Once finished, remove the mounting piece and drill a hole at the location you just marked.

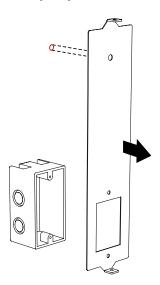


7) Attach the grounding wire to the grounding tab below and to the right of the clock movement.

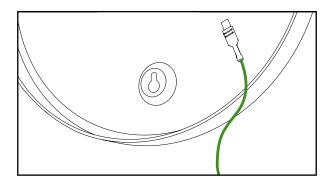

6) Insert the wall anchor into the hole, then reattach the mounting bracket. This time, also insert the #10x1.5 through the top of the mounting piece and into the wall anchor.

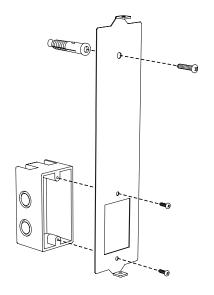


8) Remove the gearbox pin, then attach the Power connector to the port on the clock movement.

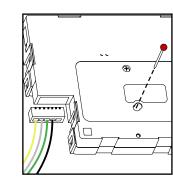

3-Wire Sync



Black

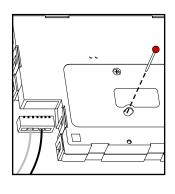


2-Wire Digital

White


Black



9) Attach the clock to the mounting piece so that the hole at the top of the clock lines up with the hole at the top of the mounting piece, and the hole at the bottom of the clock lines up with the hole at the bottom of the mounting piece.

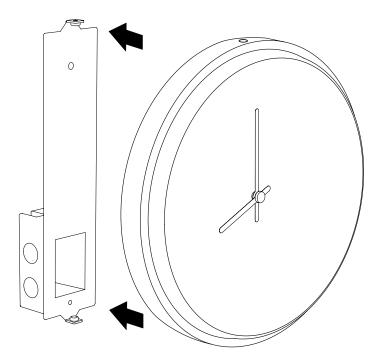

10) Use the two M4-0.5x10 screws to attach the clock to the mounting bracket. The screws should pass through the top and bottom holes on the clock, followed by the top and bottom holes of the mounting bracket.

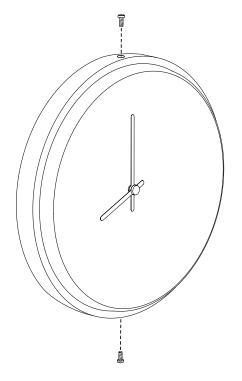



Included in Package

Description	Quantity	Picture
SlimLine analog clock	1	
Included in Wiring Kit (A-SLM-MK-	S-1)	
Mounting Piece	1	
#6-19x7/16 screw	2	
Strain Relief	1	
Included in Gang Box Kit (A-GB-M	<-1)	
#6-32x1 screw	2	
#6-19x3/8 screw	1 (not used)	
Included in Wiring Kit (A-PK-SAM-	1)	
Power/grounding wires and connector	1	
#8x1.5 Self-tapping screw	2	
Wall anchor	2	


PLEASE NOTE: A user will also have to provide a Phillips-head screwdriver, a small flat-blade screwdriver, a single gang box, any equipment needed to install the gang box, and any additional wiring needed to extend the signal, power, or ground cables. You may also need a 1/4 inch drill if you decide not to attach the clock directly to the gang box.

If any of the items listed in the wiring kit are missing, you may contact your dealer and order a replacement kit.




1) If you are installing a new gang box in the wall, leave at least 4 inches between the top of the gang box and ceiling. Confirm that the bottom of the gang box is level with the floor.

If you are using an existing gang box, the top of the gang box must be a minimum of four inches away from the ceiling.

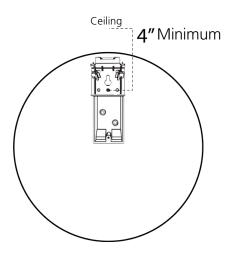

3) Attach the communication and power wires from your kit to the communication and power wires in the gang box. See the sections of this manual labeled "3-Wire Synchronous (Sync-Wire) Communication Wiring Information" or "2-Wire Digital Communication Wiring Information" for additional details, depending on your system.

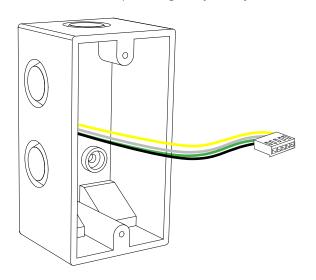

2) Run power and communication wiring to the gang box. See the sections of this manual labeled "Wiring Information" for additional details, depending on your system.

If you are using a 2-wire system, pull the YELLOW and GREEN wires out of the connector.

CHECK YOUR WIRING


The voltage between the white and black wires should measure 105-126 volts AC in the 115 volt model, 207-253 volts AC in the 230 volt model, or 21.5-26.5 volts AC in the 24 volt model.

If you are using the 24 volt model, make sure that the wiring leading to the clock is from an ISOLATED transformer.

4) If you do not wish to attach the mounting piece to the gang box, proceed to step 5A. Otherwise, go to step 6.




5A) If you do not wish to attach the mounting piece to a gang box, place the mounting piece on the wall. Leave at least 4 inches between the middle of the mounting piece and ceiling. Confirm that the bottom of the mounting piece is level with the floor.

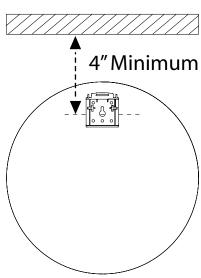


5C) Insert the wall anchors into the two holes, then place the two self tapping screws through the mounting piece and into the wall anchors. Skip step


6 and go directly to step 7.

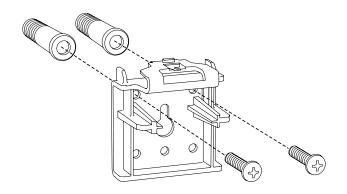

5B) Use a pencil to mark the positions of the top two holes, then use the 1/4 inch drill bit to drill holes at the locations of the two marks.

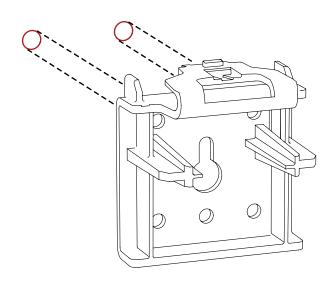


6) Place the mounting piece on the wall above the gang box so that the bottom centered hole on the piece overlaps the top hole on the gang box. Insert a #6-32x1 screw through the bottom centered hole and into the top hole of the gang box.

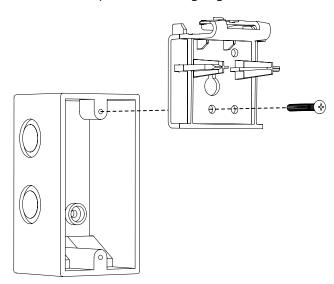




7) **Remove the gearbox pin**, then attach the power connector to the port on the movement.

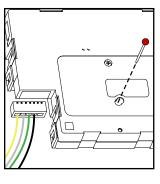






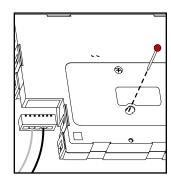


2-Wire Digital




8) Lay any excess wiring across the strain relief base, then attach the strain relief to the clock with the two #6-19x7/16 screws. The strain relief should be tight enough to prevent the wire from sliding.

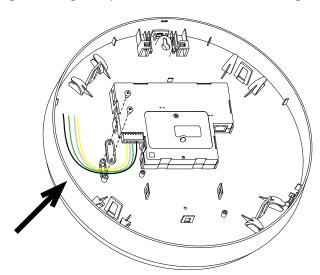

9) Attach the clock to the mounting piece by sliding the clock back onto it. You should hear a snapping noise as the latch engages.

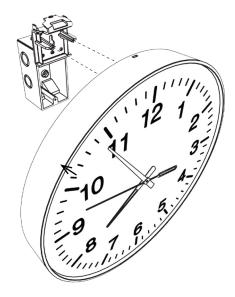

10) If you need to take the clock off the wall after the installation has been completed, use a flat-blade screwdriver or eyeglasses screwdriver to press down on and release the mounting piece latch, then slide the clock off the mounting piece.

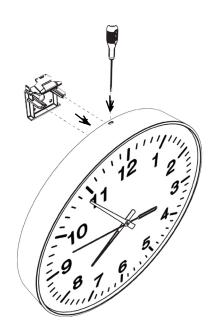



Included in Package


Description	Quantity	Picture
SlimLine analog clock with aluminum/wood rim	1	
Included in Mounting Kit (A-SLM-N	MK-AW)	
Mounting Piece	1	
Release lever	1	
#6-19x7/16 screw	2	
Strain Relief	1	
Included in Wiring Kit (A-PK-SAM-	1)	
Power/grounding wires and connector	1	
#8x1.5 Self-tapping screw	2	
Wall anchor	2	
Included in Gang Box Kit (A-GB-M	K-1)	0-
#6-32x1 screw	2	
#6-19x3/8 screw	1 (not used)	

PLEASE NOTE: A user will also have to provide a Phillips-head screwdriver, a small flat-blade screwdriver, a drill with a 1/4 inch drill bit, a pencil, a single gang box, any equipment needed to install the gang box, and any additional wiring needed to extend the signal, power, or ground cables.


If any of the items listed in the wiring kit are missing, you may contact your dealer and order a replacement kit.



1) Install the single gang box in the wall. Leave at least 4 inches between the top of the gang box and ceiling. Confirm that the bottom of the gang box is level with the floor.

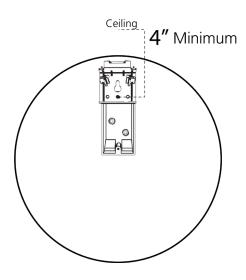

3) Attach the communication and power wires from your kit to the communication and power wires in the gang box. See the sections of this manual labeled "3-Wire Synchronous (Sync-Wire) Communication Wiring Information" or "2-Wire Digital Communication Wiring Information" for additional details, depending on your system.

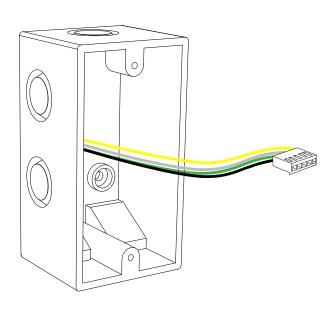

2) Run power and communication wiring to the gang box. See the sections of this manual labeled "Wiring Information" for additional details, depending on your system.


If you are using a 2-wire system, pull the YELLOW and GREEN wires out of the connector.

CHECK YOUR WIRING

The voltage between the white and black wires should measure 105-126 volts AC in the 115 volt model, 207-253 volts AC in the 230 volt model, or 21.5-26.5 volts AC in the 24 volt model.

If you are using the 24 volt model, make sure that the wiring leading to the clock is from an ISOLATED transformer.


4) Insert the release lever into the hole atop the mounting piece latch.

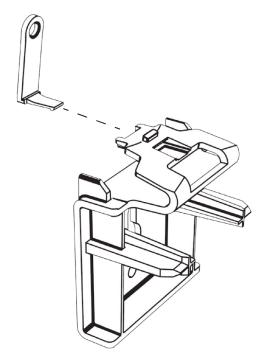




5) If you do not wish to attach the mounting piece to the gang box, proceed to step 6A. Otherwise, go to step 7.


6A) If you do not wish to attach the mounting piece to a gang box, place the mounting piece on the wall. Leave at least 4 inches between the middle of the mounting piece and ceiling. Confirm that the bottom of the mounting piece is level with the floor.

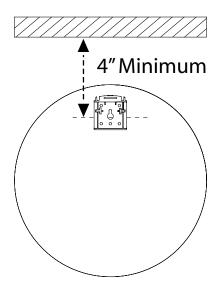

6B) Use a pencil to mark the positions of the top two holes, then use the 1/4 inch drill bit to drill holes at the locations of the two marks.

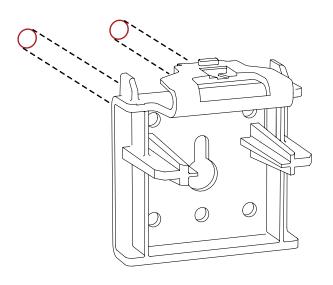


6C) Insert the wall anchors into the two holes, then place the two self tapping screws through the mounting piece and into the wall anchors. Skip step 7 and go directly to step 8.

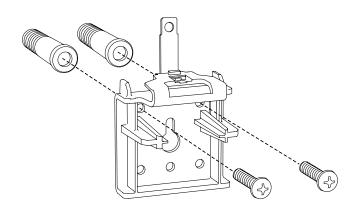





7) Place the mounting piece on the wall above the gang box so that the bottom centered hole on the piece overlaps the top hole on the gang box. Insert a #6-32x1 screw through the bottom centered hole and into the top hole of the gang box.

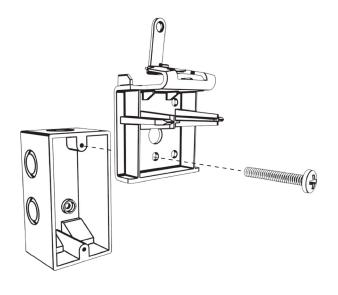

8) Temporarily attach the clock to the mounting piece (see step 9), use the pencil to mark the location of the hole at the top of the release lever, and remove the clock again (see step 11). Remove the mounting piece and make a hole at the location you just marked with the 1/8 inch drill bit. When finished, reattach the mounting piece.

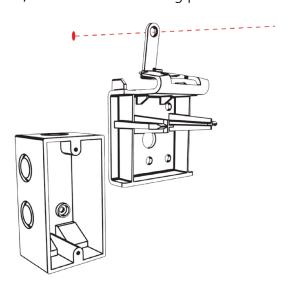


9) **Remove the gearbox pin**, then attach the power connector to the port on the movement.

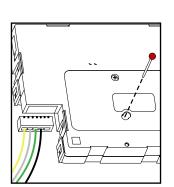

3-Wire Sync




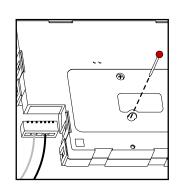

2-Wire Digital




10) Lay any excess wiring across the strain relief base, then attach the strain relief to the clock with the two #6-19x7/16 screws. The strain relief should be tight enough to prevent the wire from sliding.

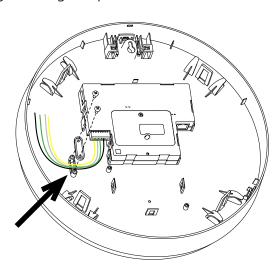





11) Attach the clock to the mounting piece by sliding the clock back onto it. You should hear a snapping noise as the latch engages.

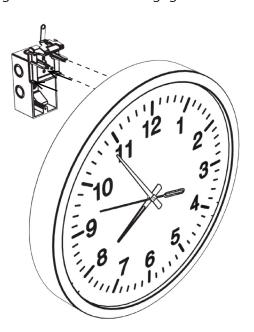

13) If you need to take the clock off the wall after the installation has been completed, remove the screw from the release lever, press the release lever down, then slide the clock off the mounting piece.

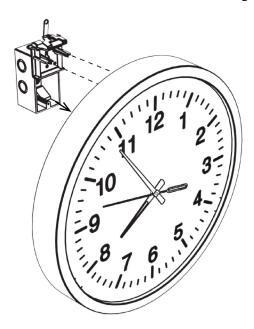

12) Place one of the self-tapping screws through the hole in the top of the release lever.

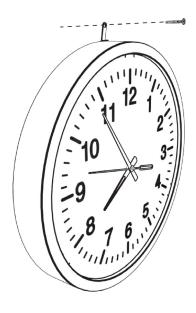

14) If you need to take the clock off the wall after the installation has been completed AND you accidentally broke off the release lever or forgot to attach it during installation, take a thin flathead screwdriver, thin ruler, or eyeglass screwdriver and insert the end between the clock and the wall. Press down on the latch until you are able to slide the clock off the mounting piece.



Wall Mount Installation - Square Clock

Included in Package

Description	Quantity	Picture
Square analog clock	1	
Mounting Piece (already attached to clock housing)	1	
Included in Wiring Kit (A-PK-SAM-1)		
Power/grounding wires and connector	1	
#8x1.5 Self-tapping screw	2 (not used)	
Wall anchor	2 (not used)	
Included in Gang Box Kit (A-GB-MK-	1)	
#6-32x1 screw	2	
#6-19x3/8 screw	1	

PLEASE NOTE: A user will also have to provide a Phillips-head screwdriver, a small flat-blade screwdriver, a single gang box, any equipment needed to install the gang box, and any additional wiring needed to extend the signal, power, or ground cables.

If any of the items listed in the wiring kit are missing, you may contact your dealer and order a replacement kit.

2) Run power and communication wiring to the


"Wiring Information" for additional details,

gang box. See the sections of this manual labeled



Wall Mount Installation - Square Clock

1) Install the single gang box in the wall. Leave at least 4 inches between the top of the gang box and ceiling. Confirm that the bottom of the gang box is level with the floor.

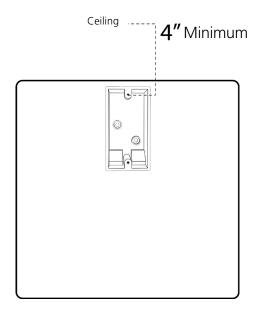

If you are using a 2-wire system, pull the YELLOW and GREEN wires out of the connector.


depending on your system.

CHECK YOUR WIRING


The voltage between the white and black wires should measure 105-126 volts AC in the 115 volt model, 207-253 volts AC in the 230 volt model, or 21.5-26.5 volts AC in the 24 volt model.

If you are using the 24 volt model, make sure that the wiring leading to the clock is from an ISOI ATED transformer.

3) Detach the housing from the back of the clock. Do this by inserting a flat-blade screwdriver about 1/8 inch into each of the slot holes until the housing detaches. You may hear a snapping noise as the latches disengage.

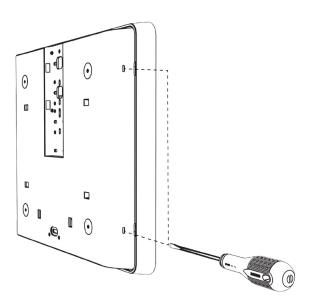


4) Release the mounting piece from the back of the housing by sliding it towards the center of the housing, then pulling it back and away from the housing.

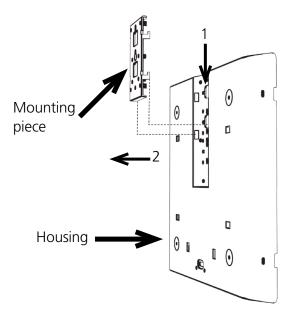




Wall Mount Installation - Square Clock


5) Thread the power wires from your kit through the hole at the top of the housing followed by the mounting piece, then attach them to the wires in the gang box. See the sections of this manual labeled "3-Wire Synchronous (Sync-Wire) Communication Wiring Information" or "2-Wire Digital Communication Wiring Information" for additional details, depending on your system.

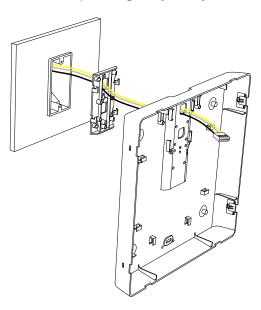


6) Attach the mounting piece to the gang box using both of the #6-32x1 screws and a Phillips-head screwdriver.

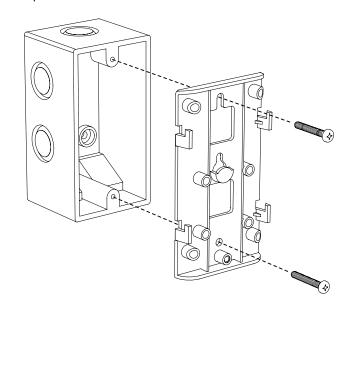

7) Slide the clock housing onto the mounting piece. If the housing does not slide on properly, tighten the screws that attach the mounting piece to the gang box.

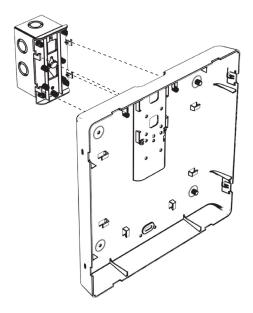


8) If you wish to prevent the clock from sliding off the mounting piece, use the small, silver 6-19x3/8 screw on the bottom centered hole. Once the screw is in place, test it by attempting to slide the housing up. The housing should not move.

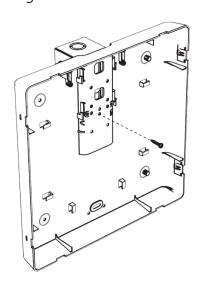





Wall Mount Installation - Square Clock

9) **Remove the gearbox pin**, then attach the power connector to the port on the movement.

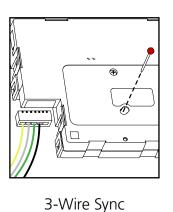


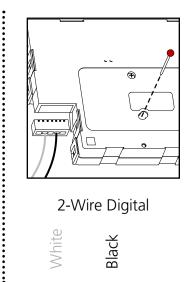


10) Loosen the strain relief by unscrewing the two screws. Slip any excess wiring through it, then tighten the strain relief by reinserting and tightening the screws.

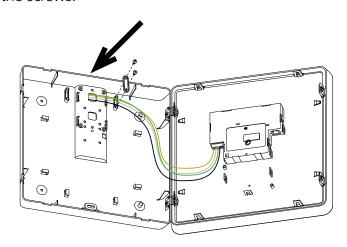

11) Slide the clock back into the housing. You should hear a snapping noise as the latches reengage.

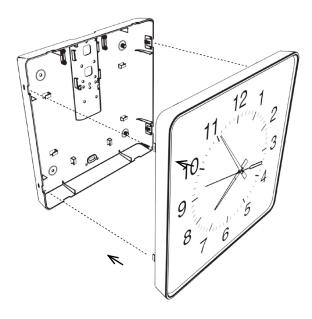

12) If you feel the need to take the clock off the wall after the installation has been completed, use a flat-blade screwdriver to detach the housing from the back of the clock, then use a Phillip's-head screwdriver to detach the mounting piece from the housing and gang box.

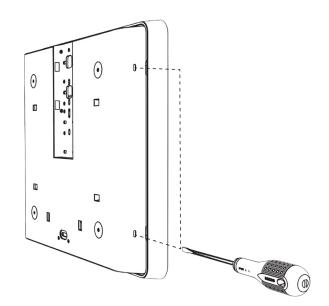



Included	in	Packag	e
IIICIAACA		1 acitag	_

Description	Quantity	Picture
Round Metal analog clock	1	
Mounting Bracket	1 (not used)	
Included in Wiring Kit (A-PK-12-2A)		
Power/grounding wires and connector	1	
#6-32x1/2 screw	2 (not used)	
M4-0.5x10	2 (not used)	
#8x1.5 Self-tapping screw	1 (not used)	
Wall anchor	1 (not used)	
Additional grounding wire with connector	1	

Continued on next page

If any of the items listed in the kits are missing, you may contact your dealer and order a replacement kit.



Included in Double Mount Kit (SAB-1BD-12R-0M or SAB-4BD-16R-0M)


Dual-mount pole, including mounting plate.	1	
#10-32x3/8 green screw	1	
#8-32x7/16 screw	8 (not used)	
M3.5-1.0x10 screw (black)	4	
Internal-tooth washer	8 (not used)	(Free Property Control of the Contro
#6-32x1 screw	4	
Flag Mount Endcap	1	

PLEASE NOTE: A user will also have to provide a Phillips-head screwdriver, a small slot-head screwdriver, a drill with a 1/4 inch drill bit, a pencil, a double gang box, Four wall anchors that can support 50 lbs and a maximum screw size of 10x1.5", four #8 screws for the wall anchors, four #6-32x1 screws for attaching the mounting plate to the gang box, any equipment needed to install the gang box, and any additional wiring needed to extend the signal, power, or ground cables.


If any of the items listed in the kits are missing, you may contact your dealer and order a replacement kit.



1) Install the double gang box in the wall or ceiling. If you are installing the gang box in the wall, leave at least eleven inches between the top of the gang box and the ceiling. If you are installing the gang box in the ceiling, leave at least eleven inches between the gang box and the wall.

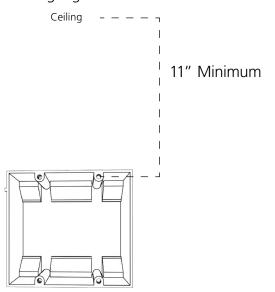

3) Detach the mounting plate from the mounting pole by unscrewing the two screws. Set the screws and pole aside for later.

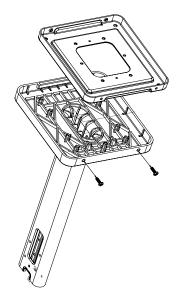

2) Run power and communication wiring to the gang box. See the sections of this manual labeled "Wiring Information" for additional details, depending on your system.


If you are using a 2-wire system, pull the YELLOW and GREEN wires out of the connector.

CHECK YOUR WIRING

The voltage between the white and black wires should measure 105-126 volts AC in the 115 volt model, 207-253 volts AC in the 230 volt model, or 21.5-26.5 volts AC in the 24 volt model.


If you are using the 24 volt model, make sure that the wiring leading to the clock is from an ISOI ATED transformer.

4) Attach the mounting plate to the gang box using only two of the four long silver #6-32x1 screws. With the mounting plate as a guide, use the pencil to trace the locations of the four larger holes at the outer corners.

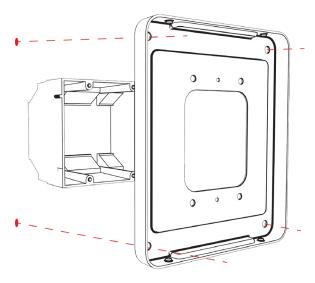





5) Remove the mounting plate and drill the four holes that were just traced. Insert the four wall anchors into the holes.

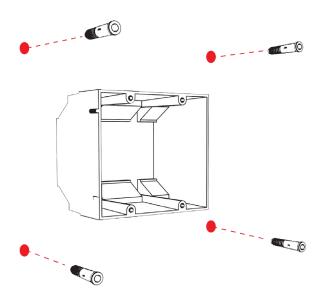

7) Thread any wiring through the mounting plate, and attach a grounding wire to the mounting plate using one of the larger centered holes and the #10-32x3/8 screw.

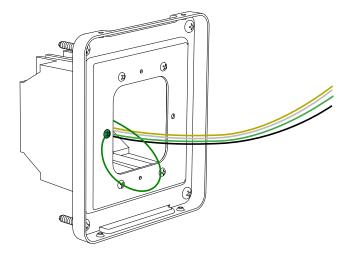


6) Reattach the mounting plate, this time using all four long, silver #8 screws, then insert the four #6-32x1 screws through the mounting plate and into the anchors.

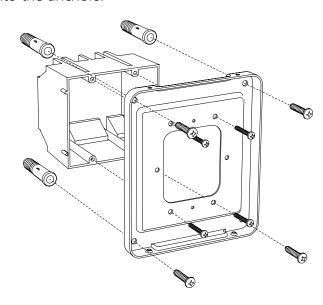




8) Remove one of the included adapters. Unscrew the four screws that connect the adapter to the pole, and the eight screws that hold the two adapters to each other. You may keep the removed adapter and screws or throw them away, at your preference.

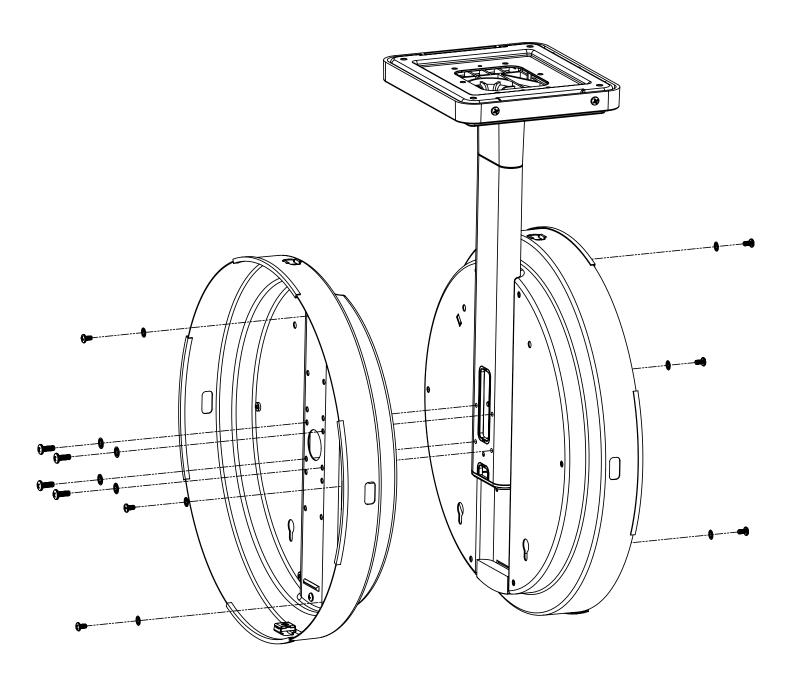




9) Thread at least fifteen inches (38.1cm) of wiring from the gang box through the bottom of the pole until the wires exit through the hole in the adapter.

10) Remove the pole endcap and plastic ring from the exposed pole side. Place the flag mount endcap on the end of the pole so that it covers the exposed large rectangular hole.

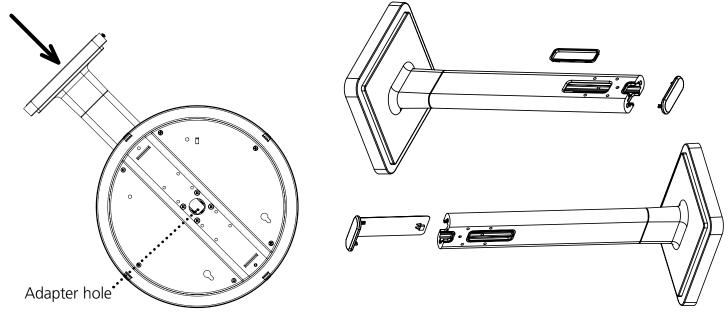


11) Attach the base of the pole to the mounting plate so that the lip is on the top of the base, and the holes for the screws are on the bottom of the base. Hang the base on the mounting plate, attach the wires from the bottom of the pole to the wires in the gang box, then screw the other side of the base onto the mounting plate using the two black screws you set aside before.

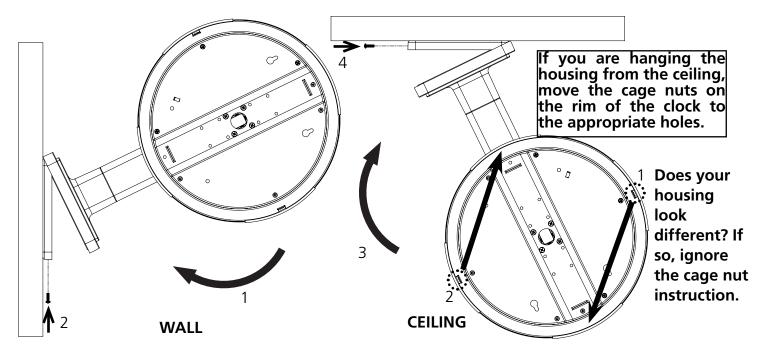






12) Attach the power connector to the wires you threaded through the pole. Consult the diagrams below for additional help, or see the sections of this manual labeled "3-Wire Synchronous (Sync-Wire) Communication Wiring Information" or "2-Wire Digital Communication Wiring Information" for additional details, depending on your system.

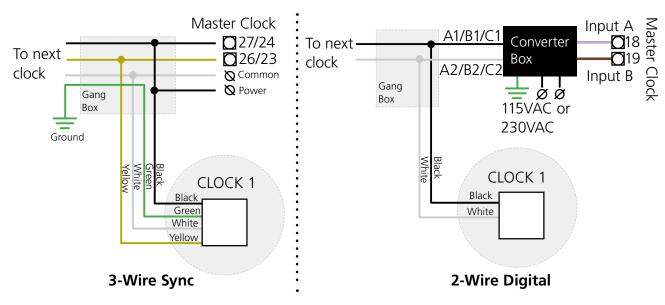

- 13) Attach the grounding wire to the grounding tab below and to the right of the clock movement.
- 14) Remove the gearbox pin, then, Attach a power connector to the port on the bottom of the movement.

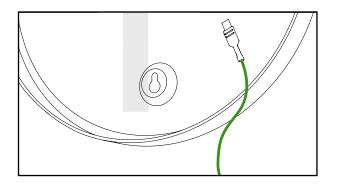

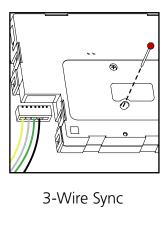

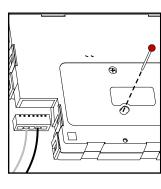


Black

e Sync 2-Wire Digital


Yellow
White
Green
Black
White



15) Place the clock onto the adapter, then insert the screws through the holes on the top and bottom of the clock into the cage nuts on the adapter.

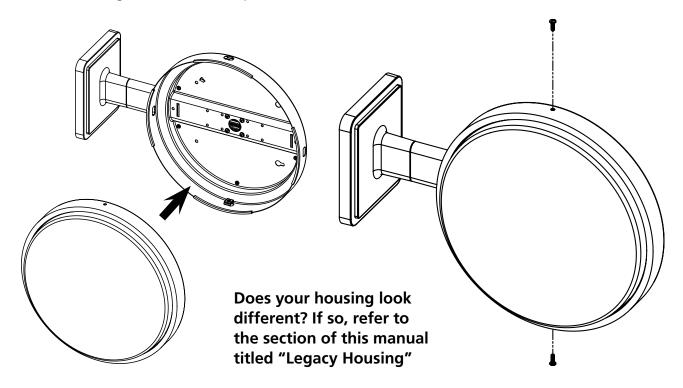

16) If you feel the need to detach the clock from the housing after the installation has been completed, remove the outer adapter screws, press down on the latches, and gently pull on the rim of the clock until the clock detaches.

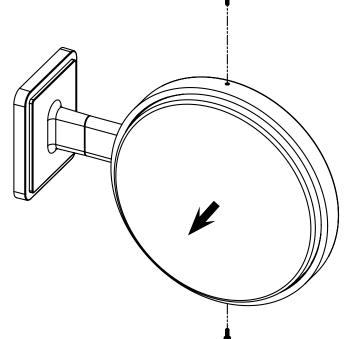

Picture



Flag Mount Installation - Round SlimLine/Aluminum Clock

			D 1	
Inc	ווומבמ	ın	Packac	ΙΔ
11 1	iuucu	111	I ackac	, C

Description

Round SlimLine analog clock	1	
Included in Double Mount Ki	t (SAH-1BD-12R-0 or SAH-1BD-1	6R-0)
Dual-mount pole, including mounting plate.	1	8
#10-32x3/8 green screw	1	
#8-32x7/16 screw	8 (not used)	
M3.5-1.0x10 screw (black)	4	
Internal-tooth washer	8 (not used)	
#6-32x1 screw	4	
Flag Mount Endcap	1	
Included in Gang Box Kit (A-C	GB-MK-1)	v
#6-32x1 screw	4	
#6-19x3/8 screw	2 (not used)	
	Continued on next page	

Quantity

Continued on next page

If any of the items listed in the kits are missing, you may contact your dealer and order a replacement kit.



Included in Mounting Kit (A-SLM-MK-S-1) or (A-SLM-MK-AW)

Description	Quantity	Picture
Mounting Piece	1 (not used)	
Release lever	0 or 1 (not used)	
#6-19x7/16 screw	2	
Strain relief	1	
Included in Wiring Kit (A-PK-SA	M-1)	
Power/grounding wires and connector	1	
#8x1.5 Self-tapping screw	2 (not used)	
Wall anchor	2 (not used)	

 
PLEASE NOTE: A user must also provide a Phillips-head screwdriver, a small flat-blade screwdriver, a drill with a 1/4 inch drill bit, a pencil, a double gang box, Four wall anchors (must support 50 lbs, #8 screw size, 1.5"(3.8cm) screw length), four #8 screws for the wall anchors, two additional #6-32x1 screws for attaching the mounting plate to the gang box, any equipment needed to install the gang box, and any additional wiring needed to extend the signal, power, or ground cables.

If any of the items listed in the wiring kit are missing, you may contact your dealer and order a replacement kit.


SlimLine and Aluminum Clocks use the same installation procedures for flag mount housings.



1) Install the double gang box in the wall or ceiling. If you are installing the gang box in the wall, leave at least eleven inches between the top of the gang box and the ceiling. If you are installing the gang box in the ceiling, leave at least eleven inches between the gang box and the wall. The box should be installed level and plumb with the wall and ceiling.



If you are using a 2-wire system, pull the YELLOW and GREEN wires out of the connector.

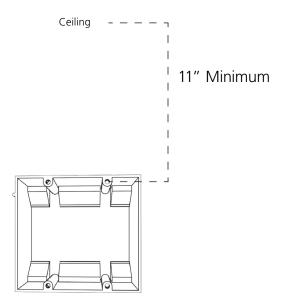


CHECK YOUR WIRING


The voltage between the white and black wires should measure 105-126 volts AC in the 115 volt model, 207-253 volts AC in the 230 volt model, or 21.5-26.5 volts AC in the 24 volt model.

If you are using the 24 volt model, make sure that the wiring leading to the clock is from an ISOLATED transformer.

3) Detach the mounting plate from the mounting pole by unscrewing the two screws. Set the screws and pole aside for later.

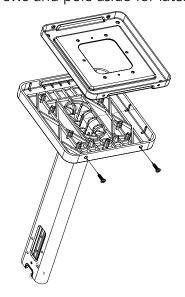


4) Attach the mounting plate to the gang box using only two of the four long, silver #6-32x1 screws. With the mounting plate as a guide, use the pencil to trace the locations of the four larger holes at the outer corners.

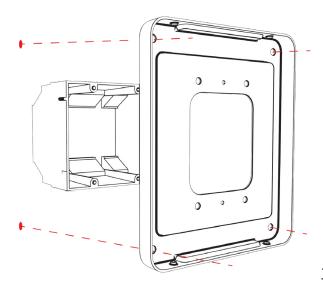





5) Remove the mounting plate and drill the four holes that were just traced. Insert the four wall anchors into the holes.

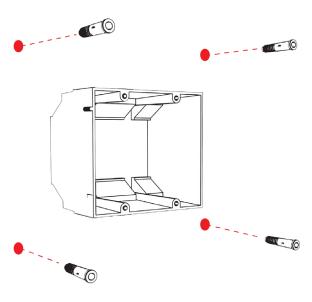

7) Thread any wiring through the mounting plate, and attach a grounding wire to the mounting plate using one of the larger centered holes and the #10-32x3/8 screw.

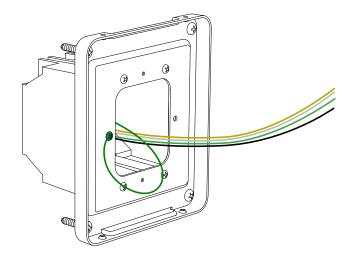


6) Reattach the mounting plate, this time using all four long, silver #6-32x1 screws, then insert the four #8 screws through the mounting plate and into the anchors.

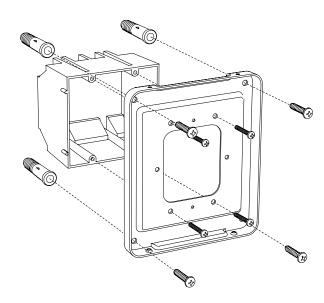




8) Remove one of the included adapters. Unscrew the four screws that connect the adapter to the pole, and the eight screws that hold the two adapters to each other. You may keep the removed adapter and screws or throw them away, at your preference.

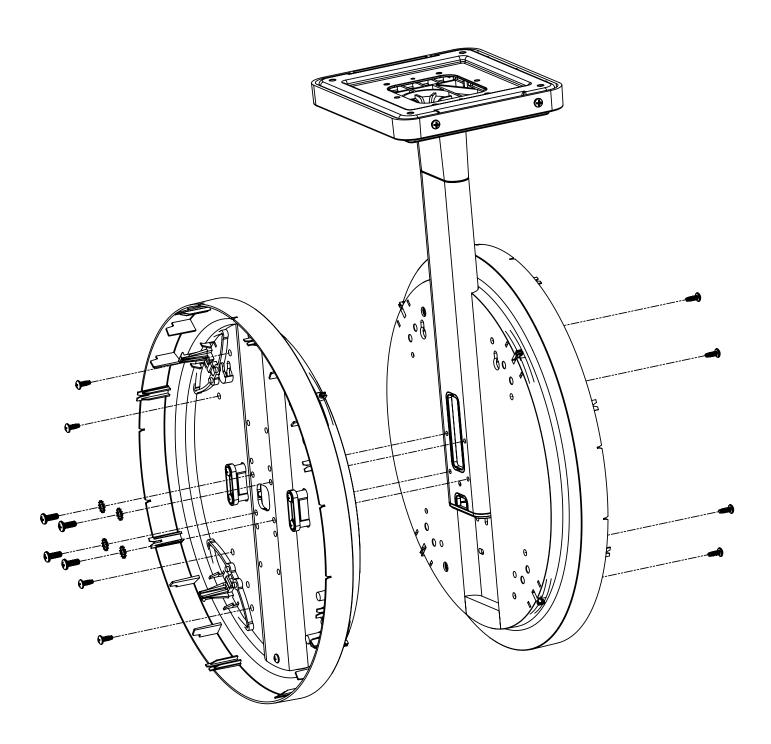





- 9) Thread at least fifteen inches (38.1cm) of wiring from the gang box through the bottom of the pole until each wire exits through the hole in the adapter.
- 10) Remove the pole endcap and plastic ring from the exposed pole side. Place the flag mount endcap on the end of the pole so that it covers the exposed large rectangular hole.

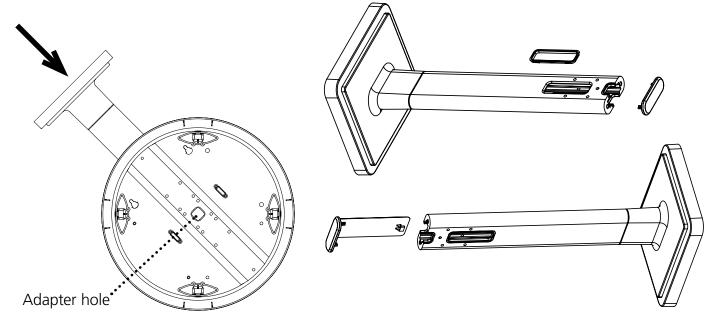


11) Attach the base of the pole to the mounting plate so that the lip is on the top of the base, and the holes for the screws are on the bottom of the base. Hang the base on the mounting plate, attach the wires from the bottom of the pole to the wires in the gang box, then screw the other side of the base onto the mounting plate using the two black screws you set aside before.

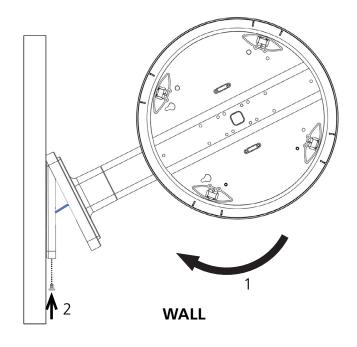

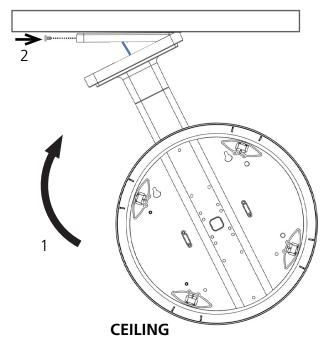




12) Attach the signal and power wires from your kit to the wires you threaded through the pole. Consult the diagrams below for additional help, or see the sections of this manual labeled "3-Wire Synchronous (Sync-Wire) Communication Wiring Information" or "2-Wire Digital Communication Wiring Information" for additional details, depending on your system.

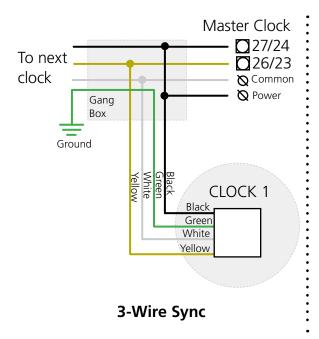



13) **Remove the gearbox pin**, then attach a power connector to the port on the side of the movement.

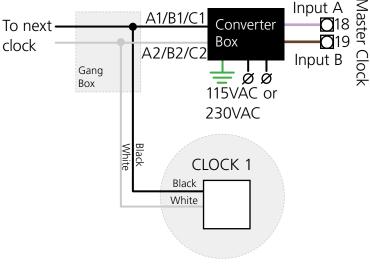

2-Wire Digital


14) Lay any excess wiring across the strain relief base, then attach the strain relief to the clock with the two #6-19x7/16 screws. The strain relief should be tight enough to prevent the wire from sliding.

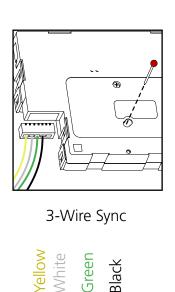

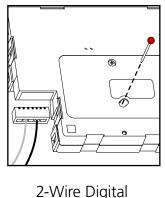



Black

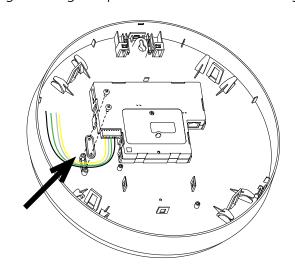




P. (+1) 215.322.6063 F. (+1) 215.322.8498 www.sapling-inc.com




Flag Mount Installation - Round SlimLine/Aluminum Clock

15) Slide the clock onto the adapter in the rotation that you wish it to be viewed. You should hear a snapping noise as the four clips on the adapter secure the clock in place.

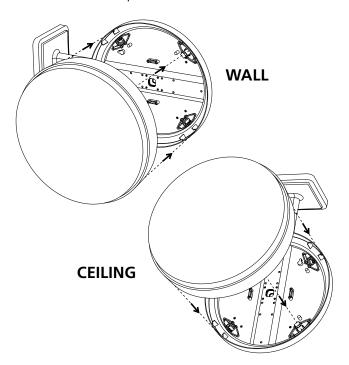

16) If you feel the need to detach the clock from the housing after the installation has been completed, use a flat-blade screwdriver on the four slots around the outside of the housing. You may hear a snapping noise as the internal latches disengage.

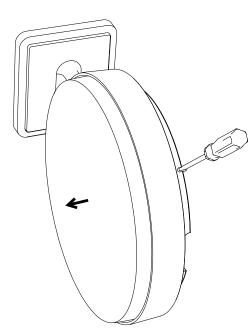




Included in Package

Description	Quantity	Picture
Square analog clock	1	
Included in Pole Kit (SAB-1BD-	-00S-0 or SAB-1BD-01S-0)	
Dual-mount pole, including mounting plate.	1	
#8-32x7/16 screw	8 (4 used)	
M3.5-1.0x10 screw (black)	4 (not used)	
Internal-tooth washer	8 (4 used)	
#10-32x3/8 green screw	1	
#6-32x1 screw	4	
Flag Mount Endcap	1	

Continued on next page

 If any of the items listed in the kits are missing, you may contact your dealer and order a replacement kit.



P. (+1) 215.322.6063 F. (+1) 215.322.8498 www.sapling-inc.com



Flag Mount Installation - Square Clock


Included in Pole Kit (SAB-1BD-00S-0 or	3AD-1DD-013-0)	
Power/grounding wires and connector	1	
#8x1.5 Self-tapping screw	2 (not used)	
Wall anchor	2 (not used)	
Included in Gang Box Kit (A-GB-MK-1)		Ф
#6-32x1 screw	2	
#6-19x3/8 screw	1 (not used)	
Included in Wiring Kit (A-WK-MTG-1)		
Description	Quantity	Picture
#10x1.5 Self-tapping screw	Quantity 2	Picture
	<u> </u>	Picture
#10x1.5 Self-tapping screw	2	Picture
#10x1.5 Self-tapping screw Wall anchor	2	Picture

PLEASE NOTE: A user will also have to provide a Phillips-head screwdriver, a small flat-blade screwdriver, a drill with a 1/4 inch drill bit, a pencil, a double gang box, four wall anchors (must support 50 lbs, #8 screw size, 1.5"(3.8cm) screw length), four #8 screws for the wall anchors, two additional #6-32x1 screws for attaching the mounting plate to the gang box, any equipment needed to install the gang box, and any additional wiring needed to extend the power or ground cables.


If any of the items listed in the kits are missing, you may contact your dealer and order a replacement kit.



1) Install the double gang box in the wall or ceiling. If you are installing the gang box in the wall, leave at least eleven inches between the top of the gang box and the ceiling. If you are installing the gang box in the ceiling, leave at least eleven inches between the gang box and the wall. The box should be installed level and plumb with the wall and ceiling.

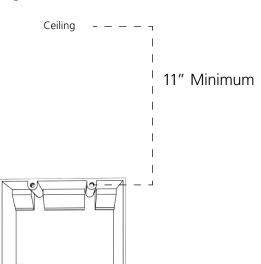

3) Detach the mounting plate from the mounting pole by unscrewing the two screws. Set the screws and pole aside for later.

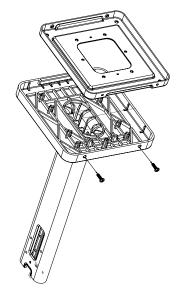

2) Run power and communication wiring to the gang box. See the sections of this manual labeled "Wiring Information" for additional details, depending on your system.


If you are using a 2-wire system, pull the YELLOW and GREEN wires out of the connector.

CHECK YOUR WIRING

The voltage between the white and black wires should measure 105-126 volts AC in the 115 volt model, 207-253 volts AC in the 230 volt model, or 21.5-26.5 volts AC in the 24 volt model.


If you are using the 24 volt model, make sure that the wiring leading to the clock is from an ISOLATED transformer.

4) Attach the mounting plate to the gang box using only two of the four long, silver #6-32x1 screws. With the mounting plate as a guide, use the pencil to trace the locations of the four larger holes at the outer corners.

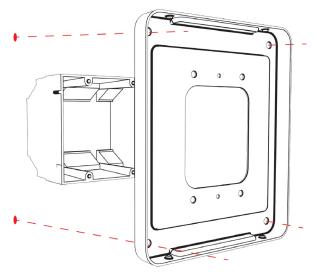





5) Remove the mounting plate and drill the four holes that were just traced. Insert the four wall anchors into the holes.

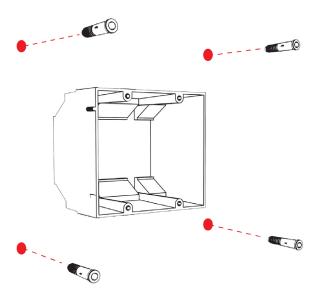


7) Thread any wiring through the mounting plate, and attach a grounding wire to the mounting plate using one of the larger centered holes and the #10-32x3/8 screw.

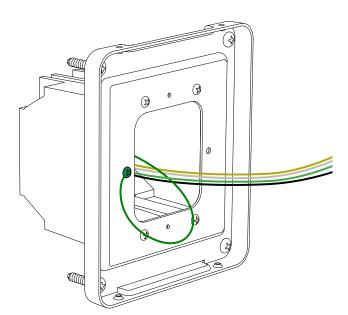

6) Reattach the mounting plate, this time using all four long, silver #6-32x1 screws, then insert the four #8 screws through the mounting plate and into the anchors.

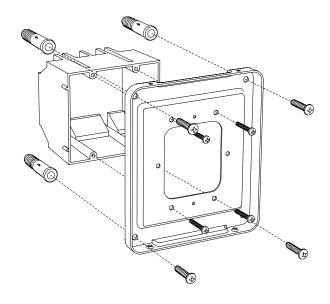


8) Detach the housing from the back of each clock. Do this by inserting a flat-blade screwdriver about 1/8 inch into each of the slot holes until the piece detaches. You may hear a snapping noise as the latches disengage.

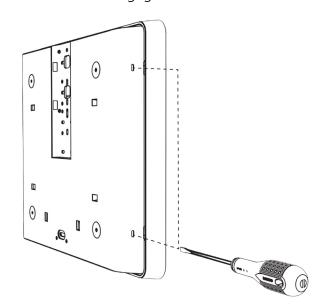





9) Release the mounting piece from the back of the housing by sliding it towards the center of the housing, then pulling it back and away from the housing. You will not need the mounting pieces later; either store them or throw them away at your discretion. **DO NOT THROW AWAY THE HOUSINGS.**

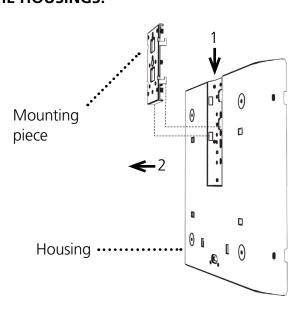

10) Attach the clock housing to the pole using four black #8-32x7/16 screws and four internal-tooth washers.

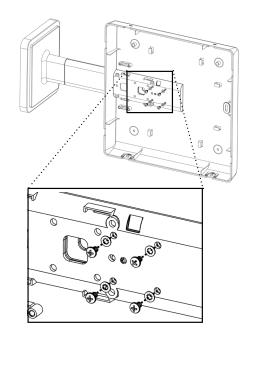


11) Thread at least fifteen inches (38.1cm) of wiring from the gang box through the bottom of the pole until each wire exits through the hole in the adapter.

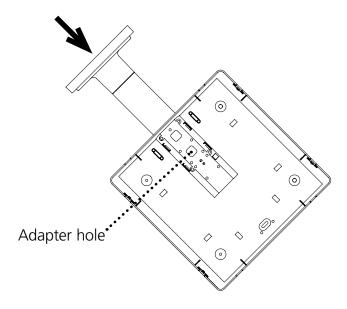




12) Attach the base of the pole to the mounting plate, so that the lip is on the top of the base, and the holes for the screws are on the bottom of the base. Hang the base on the mounting plate, attach the wires from the bottom of the pole to the wires in the gang box, then screw the other side of the base onto the mounting plate using the two black screws you set aside before.

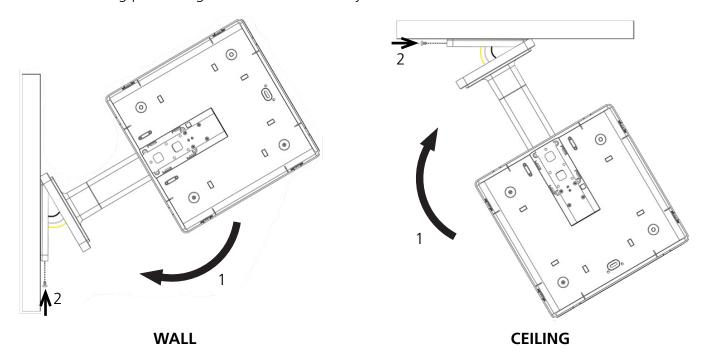


13) Attach the signal and power wires from your kit to the wires you threaded through the pole. Consult the diagrams below for additional help, or see the sections of this manual labeled "3-Wire Synchronous (Sync-Wire) Communication Wiring Information" or "2-Wire Digital Communication Wiring Information" for additional details, depending on your system.

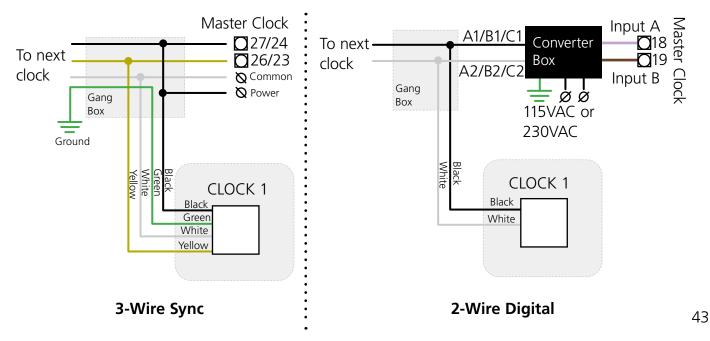




14) Remove the gearbox pin, then attach the power connector to the port on the movement.

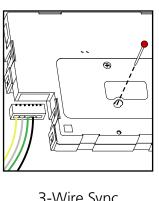






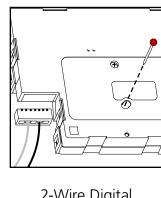


2-Wire Digital




15) Loosen the strain relief by unscrewing the two screws. Slip any excess wiring through them, then tighten the strain relief by reinserting and tightening the screws.

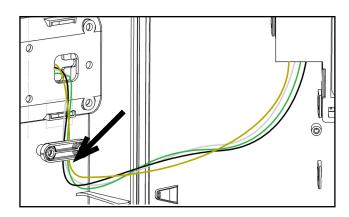

16) Rotate the clock so that it is right-side up. Slide the clock back into its housing. You should hear a snapping noise as the latches reengage.

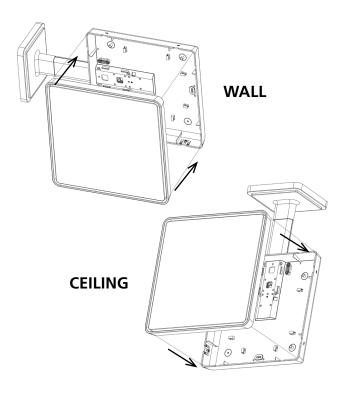

17) If you feel the need to detach the clock from the housing after the installation has been completed, use a flat-blade screwdriver on the four slots around the outside of the housing. You may hear a snapping noise as the internal latches disengage.

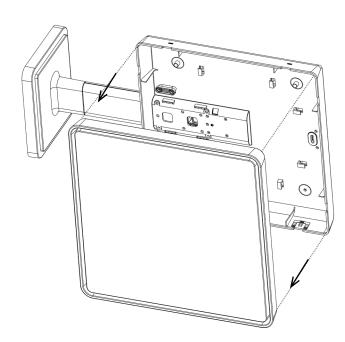



Included in Package

Double Mount Installation - Round Metal Clock

Description	Quantity	Picture

Round Metal analog clock 2



Mounting Bracket 2 (not used)

Included in Wiring Kit (A-PK-12-2A)

Power/grounding wires and 2 connector



#6-32x1/2 screw 4 (not used)



 
M4-0.5x10 4 (not used)



#8x1.5 Self-tapping screw 2 (not used)




Wall anchor 2 (not used)



Additional grounding wire 2 with connector



PLEASE NOTE: A user will also have to provide a Phillips-head screwdriver, a small slot-head screwdriver, a drill with a 1/4 inch drill bit, a pencil, a double gang box, Four wall anchors that can support 50 lbs and a maximum screw size of 10x1.5", four #8 screws for the wall anchors, four #6-32x1 screws for attaching the mounting plate to the gang box, any equipment needed to install the gang box, and any additional wiring needed to extend the signal, power, or ground cables.

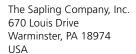

P. (+1) 215.322.6063 F. (+1) 215.322.8498 www.sapling-inc.com



Double Mount Installation - Round Metal Clock

Included in Double Mount Kit (SAB-1BD-12R-0M or SAB-4BD-16R-0M)


Dual-mount pole, including mounting plate.	1	
#10-32x3/8 green screw	1	
#8-32x7/16 screw	8 (not used)	
M3.5-1.0x10 screw (black)	4	
Internal-tooth washer	8 (not used)	(Total)
#6-32x1 screw	4	
Flag Mount Endcap	1 (not used)	

PLEASE NOTE: A user will also have to provide a Phillips-head screwdriver, a small slot-head screwdriver, a drill with a 1/4 inch drill bit, a pencil, a double gang box, Four wall anchors that can support 50 lbs and a maximum screw size of 10x1.5", four #8 screws for the wall anchors, four #6-32x1 screws for attaching the mounting plate to the gang box, any equipment needed to install the gang box, and any additional wiring needed to extend the signal, power, or ground cables.


If any of the items listed in the kits are missing, you may contact your dealer and order a replacement kit.



1) Install the double gang box in the wall or ceiling. If you are installing the gang box in the wall, leave at least eleven inches between the top of the gang box and the ceiling. If you are installing the gang box in the ceiling, leave at least eleven inches between the gang box and the wall.

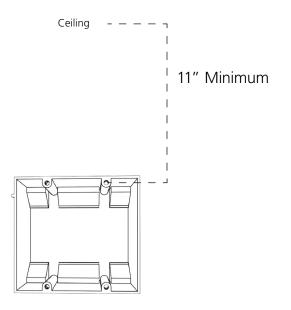

3) Detach the mounting plate from the mounting pole by unscrewing the two screws. Set the screws and pole aside for later.

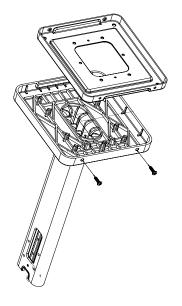

2) Run power and communication wiring to the gang box. See the sections of this manual labeled "Wiring Information" for additional details, depending on your system.


If you are using a 2-wire system, pull the YELLOW and GREEN wires out of the connectors.

CHECK YOUR WIRING

The voltage between the white and black wires should measure 105-126 volts AC in the 115 volt model, 207-253 volts AC in the 230 volt model, or 21.5-26.5 volts AC in the 24 volt model.


If you are using the 24 volt model, make sure that the wiring leading to the clock is from an ISOLATED transformer.

4) Attach the mounting plate to the gang box using only two of the four long silver #6-32x1 screws. With the mounting plate as a guide, use the pencil to trace the locations of the four larger holes at the outer corners.

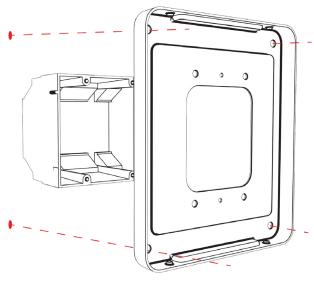





5) Remove the mounting plate and drill the four holes that were just traced. Insert the four wall anchors into the holes.

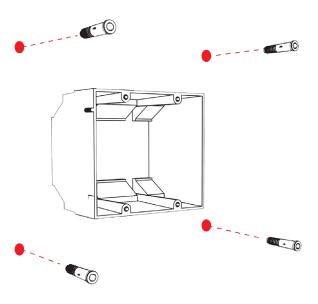


7) Thread any wiring through the mounting plate, and attach a grounding wire to the mounting plate using one of the larger centered holes and the #10-32x3/8 screw.

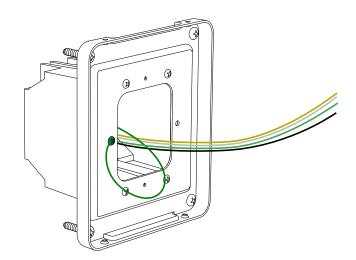

6) Reattach the mounting plate, this time using all four long, silver #8 screws, then insert the four #6-32x1 screws through the mounting plate and into the anchors.

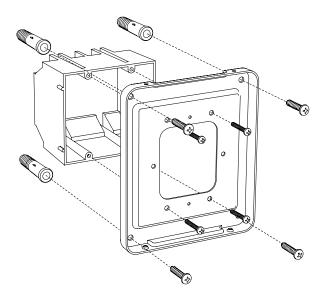


8) Thread at least fifteen inches (38.1cm) of wiring from the gang box through the bottom of the pole until each wire exits through the hole in the adapter.

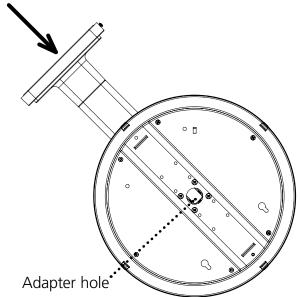


If you are planning on mounting the housing from the ceiling, use pliers to remove the cage nuts and reinstall them in the other two open holes on the housing.



9) Attach the base of the pole to the mounting plate so that the lip is on the top of the base, and the holes for the screws are on the bottom of the base. Hang the base on the mounting plate, attach the wires from the bottom of the pole to the wires in the gang box, then screw the other side of the base onto the mounting plate using the two black screws you set aside before.

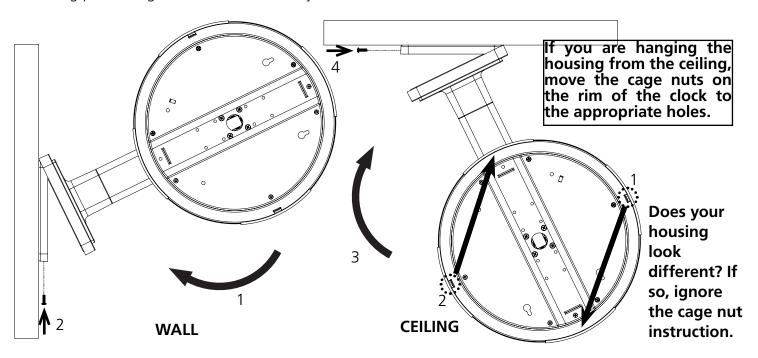


10) Attach the power connectors to the wires you threaded through the pole. Consult the diagrams below for additional help, or see the sections of this manual labeled "3-Wire Synchronous (Sync-Wire) Communication Wiring Information" or "2-Wire Digital Communication Wiring Information" for additional details, depending on your system.

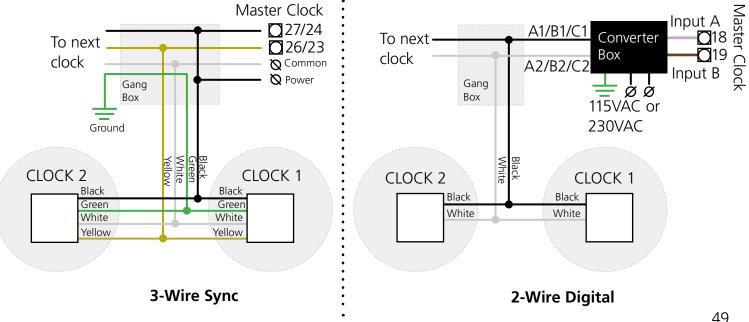




11) Attach the grounding wire to the grounding tab below and to the right of the clock movement.

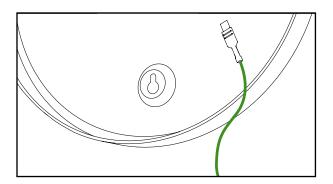


12) Remove the gearbox pins, then attach a power connector to the ports on the bottom of each movement.

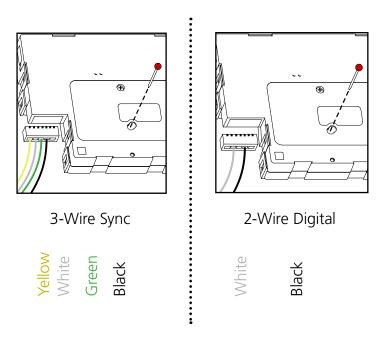




15) Place the clock onto each adapter, then insert the screws through the holes on the top and bottom of the clock into the cage nuts on the adapter.

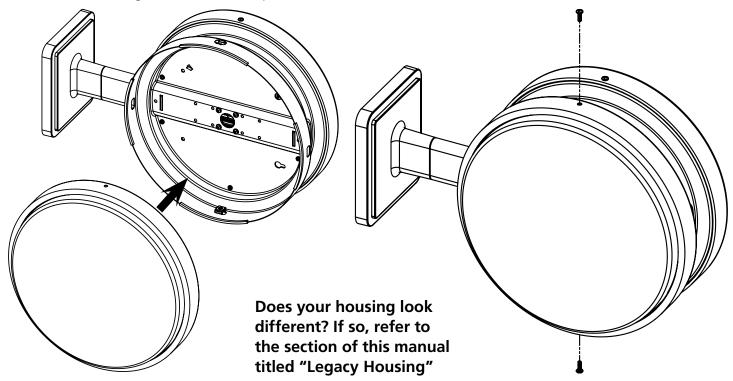

16) If you feel the need to detach the clock from the housing after the installation has been completed, remove the outer adapter screws, press down on the latches, and gently pull on the rim of the clock until the clock detaches.

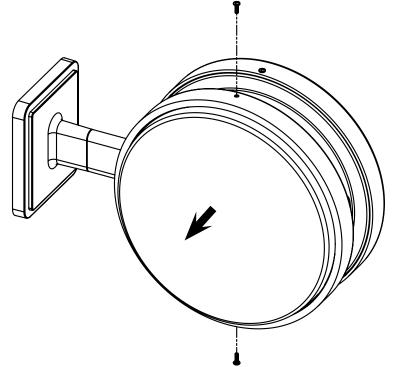



Included in F	'ackade
---------------	---------

Description	Quantity	Picture
Round SlimLine analog clock	2	

Included in Double Mount Kit (SAH-1BD-12R-0 or SAH-1BD-16R-0)

Dual-mount pole, including mounting plate.	1	
#10-32x3/8 green screw	1	
#8-32x7/16 screw	8	
M3.5-1.0x10 screw (black)	4	
Internal-tooth washer	8	
#6-32x1 screw	4	

Continued on next page

If any of the items listed in the kits are missing, you may contact your dealer and order a replacement kit.




Included in Mounting Kits (A-SLM-MK-S-1) or (A-SLM-MK-AW)			
Mounting Piece	2 (not used)		
Release lever	0 or 2 (not used)		
#6-19x7/16 screw	4		
Strain relief	2		
Included in Wiring Kits (A-PK-SAM	-1)		
Description	Quantity	Picture	
Power/grounding wires and connector	2		
#8x1.5 Self-tapping screw	4 (not used)		
Wall anchor	4 (not used)		
Included in Gang Box Kit (A-GB-MK-1)			
#6-32x1 screw	4		
#6-19x3/8 screw	2 (not used)		

PLEASE NOTE: A user will also have to provide a Phillips-head screwdriver, a small flat-blade screwdriver, a drill with a 1/4 inch drill bit, a pencil, a double gang box, Four wall anchors (must support 50 lbs, #8 screw size, 1.5"(3.8cm) screw length), four #8 screws for the wall anchors, any equipment needed to install the gang box, and any additional wiring needed to extend the signal, power, or ground cables.


SlimLine and Aluminum Clocks use the same installation procedures for double mount housings.



 1) Install the double gang box in the wall or ceiling. If you are installing the gang box in the wall, leave at least eleven inches between the top of the gang box and the ceiling. If you are installing the gang box in the ceiling, leave at least eleven inches between the gang box and the wall. The box should be installed level and plumb with the wall and ceiling.



If you are using a 2-wire system, pull the YELLOW and GREEN wires out of the connectors.

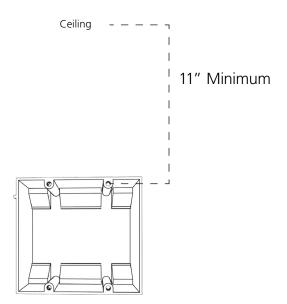



CHECK YOUR WIRING


The voltage between the white and black wires should measure 105-126 volts AC in the 115 volt model, 207-253 volts AC in the 230 volt model, or 21.5-26.5 volts AC in the 24 volt model.

If you are using the 24 volt model, make sure that the wiring leading to the clock is from an ISOLATED transformer.

 3) Detach the mounting plate from the mounting pole by unscrewing the two screws. Set the screws and pole aside for later.




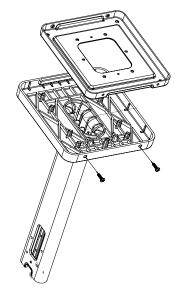

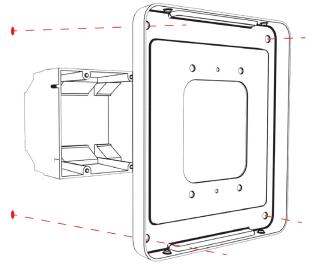





5) Remove the mounting plate and drill the four holes that were just traced. Insert the four wall anchors into the holes.

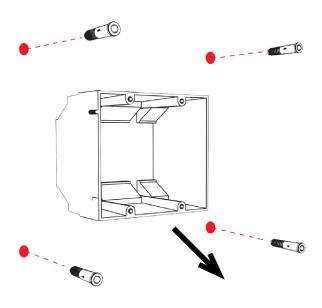


7) Thread any wiring through the mounting plate, and attach a grounding wire to the mounting plate using one of the larger centered holes and the #10-32x3/8 screw.

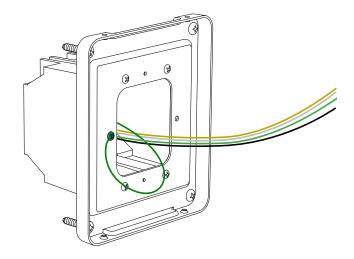

6) Reattach the mounting plate, this time using all four long, silver #6-32x1 screws, then insert the four #8 screws through the mounting plate and into the anchors.

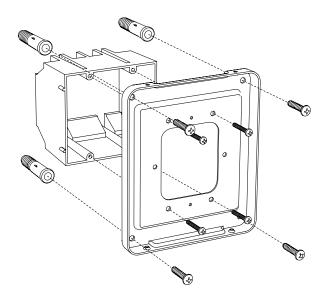


8) Thread at least fifteen inches (38.1cm) of wiring from the gang box through the bottom of the pole until each wire exits through the hole in the adapter.

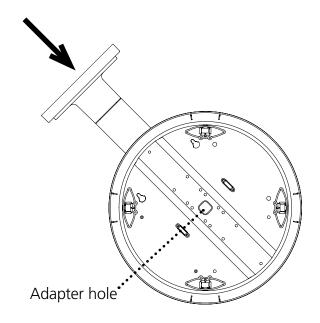




9) Attach the base of the pole to the mounting plate so that the lip is on the top of the base, and the holes for the screws are on the bottom of the base. Hang the base on the mounting plate, attach the wires from the bottom of the pole to the wires in the gang box, then screw the other side of the base onto the mounting plate using the two black screws you set aside before.

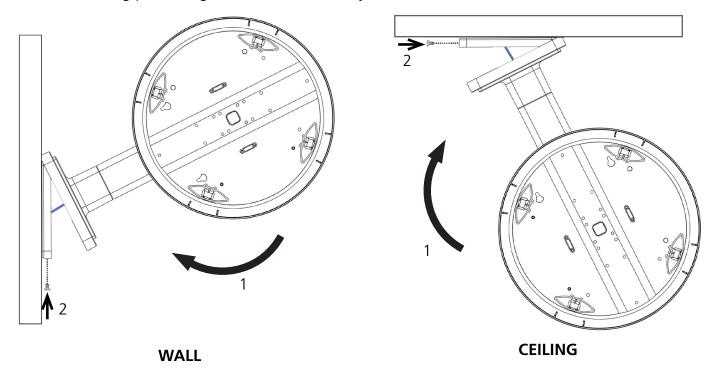


10) Attach the signal and power wires from your kit to the wires you threaded through the poles. Consult the diagrams below for additional help, or see the sections of this manual labeled "3-Wire Synchronous (Sync-Wire) Communication Wiring Information" or "2-Wire Digital Communication Wiring Information" for additional details, depending on your system.

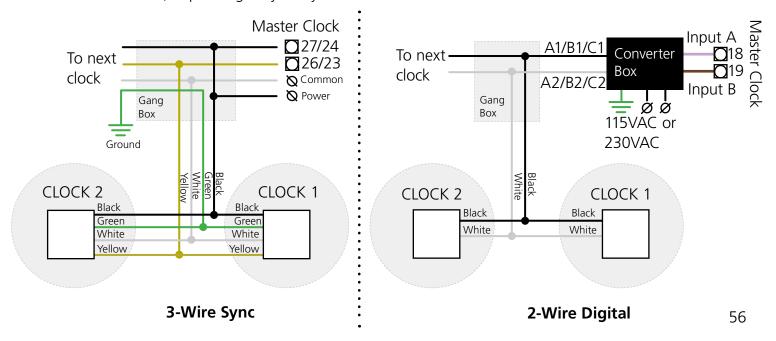




11) Remove the gearbox pins, then attach a power connector to the ports on the side of each movement.

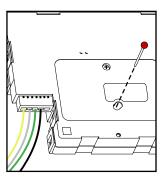

3-Wire Sync




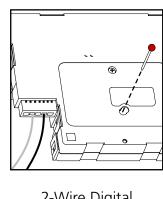


2-Wire Digital

Black


12) Lay any excess wiring across the strain relief base, then attach the strain relief to the clock with the two #6-19x7/16 screws. The strain relief should be tight enough to prevent the wire from sliding.

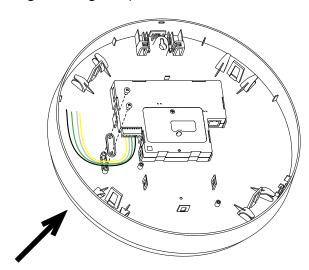

13) Slide each clock onto the adapter in the rotation that you wish it to be viewed. You should hear a snapping noise as the four clips on the adapter secure the clock in place.

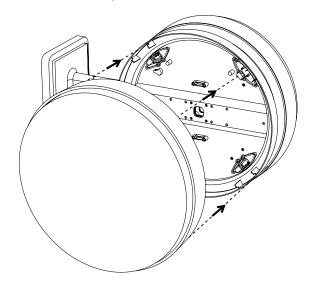

14) If you feel the need to detach the clock from the housing after the installation has been completed, use a flat-blade screwdriver on the four slots around the outside of the housing. You may hear a snapping noise as the internal latches disengage.

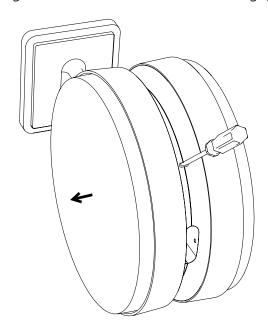




Included in Package

Description	Quantity	Picture
Square analog clock	2	
Mounting Piece-already attached to clock housing	2 (not used)	
Included in Pole Kit (SAB-1BD-00	S-0 or SAB-1BD-01S-0)	
Dual-mount pole, including mounting plate.	1	
#10-32x3/8 green screw	1	
#8-32x7/16 screw	8	
M3.5-1.0x10 screw (black)	4	
Internal-tooth washer	4	
#6-32x1 screw	4	

Continued on next page

 If any of the items listed in the kits are missing, you may contact your dealer and order a replacement kit.



P. (+1) 215.322.6063 F. (+1) 215.322.8498 www.sapling-inc.com



Double Mount Installation - Square Clock

Included in Wiring Kits (A-PK-SAM-1	Included	in Wiring	Kits (A-PK-SAM-1
-------------------------------------	----------	-----------	--------	------------

Description	Quantity	Picture
Power/grounding wires and connector	2	
#8x1.5 Self-tapping screw	4 (not used)	
Wall anchor	4 (not used)	
Included in Gang Box Kit (A-GB-MK-1)		
#6-32x1 screw	4	
#6-19x3/8 screw	2 (not used)	


PLEASE NOTE: A user will also have to provide a Phillips-head screwdriver, a small flat-blade screwdriver, a drill with a 1/4 inch drill bit, a pencil, a double gang box, Four wall anchors (must support 50 lbs, #8 screw size, 1.5"(3.8cm) screw length), four #8 screws for the wall anchors, any equipment needed to install the gang box, and any additional wiring needed to extend the signal, power, or ground cables.



1) Install the double gang box in the wall or ceiling. If you are installing the gang box in the wall, leave at least eleven inches between the top of the gang box and the ceiling. If you are installing the gang box in the ceiling, leave at least eleven inches between the gang box and the wall. The box should be installed level and plumb with the wall and ceiling.

2) Run power and communication wiring to the gang box. See the sections of this manual labeled "Wiring Information" for additional details, depending on your system.

If you are using a 2-wire system, pull the YELLOW and GREEN wires out of the connectors.

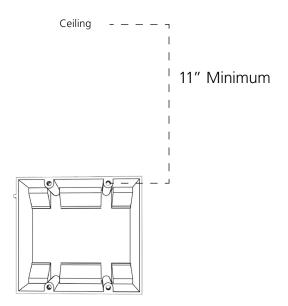


CHECK YOUR WIRING


The voltage between the white and black wires should measure 105-126 volts AC in the 115 volt model, 207-253 volts AC in the 230 volt model, or 21.5-26.5 volts AC in the 24 volt model.

If you are using the 24 volt model, make sure that the wiring leading to the clock is from an ISOLATED transformer.

3) Detach the mounting plate from the mounting pole by unscrewing the two screws. Set the screws and pole aside for later.

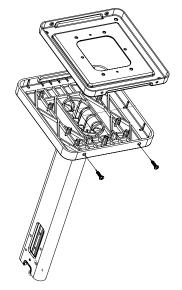


4) Attach the mounting plate to the gang box using only two of the four long, silver #6-32x1 screws. With the mounting plate as a guide, use the pencil to trace the locations of the four larger holes at the outer corners.

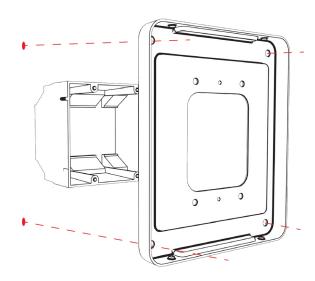





5) Remove the mounting plate and drill the four holes that were just traced. Insert the four wall anchors into the holes.

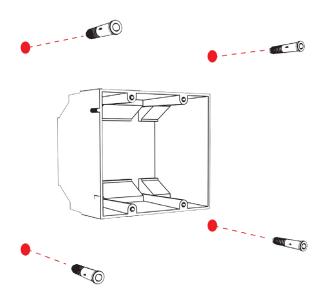


7) Thread any wiring through the mounting plate, and attach a grounding wire to the mounting plate using one of the larger centered holes and the #10-32x3/8 screw.

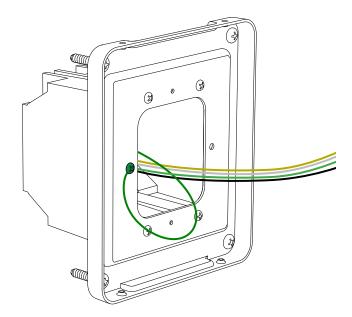

6) Reattach the mounting plate, this time using all four long, silver #6-32x1 screws, then insert the four #8 screws through the mounting plate and into the anchors.

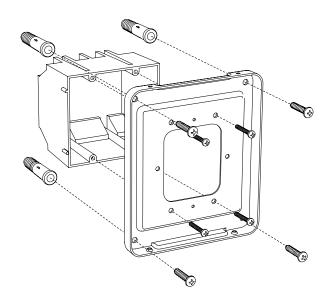


8) Detach the housing from the back of each clock. Do this by inserting a flat-blade screwdriver about 1/8 inch into each of the slot holes until the piece detaches. You may hear a snapping noise as the latches disengage.

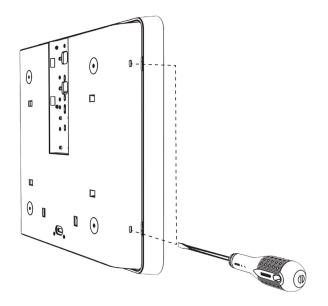





9) Release the mounting piece from the back of each housing by sliding it away from the center of the housing, then pulling it back and away from the housing. You will not need the mounting pieces later; either store them or throw them away at your discretion. **DO NOT THROW AWAY THE HOUSINGS.**

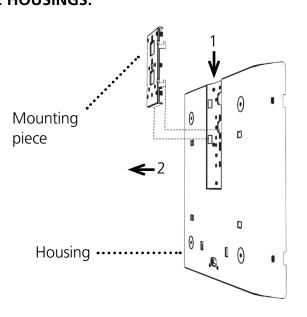


10) Attach both housings to the pole using four black 8-32x7/16 screws and four internal-tooth washers on each side.

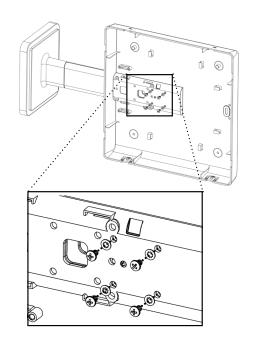

11) Attach the housings to each other using the four black M3.5-1.0x10 screws, two on each housing.

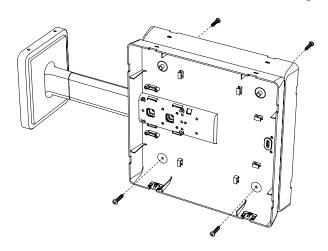


12) Thread at least fifteen inches (38.1cm) of wiring from the gang box through the bottom of the pole until each wire exits through the hole in the adapter.

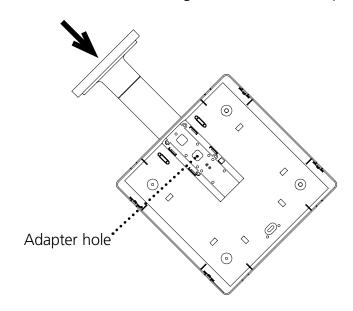




13) Attach the base of the pole to the mounting plate, so that the lip is on the top of the base, and the holes for the screws are on the bottom of the base. Hang the base on the mounting plate, attach the wires from the bottom of the pole to the wires in the gang box, then screw the other side of the base onto the mounting plate using the two black screws you set aside before.

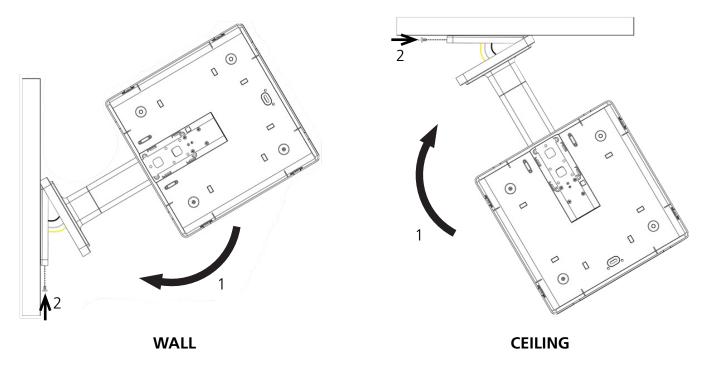


14) Attach the power connectors to the wires you threaded through the poles. Consult the diagrams below for additional help, or see the sections of this manual labeled "3-Wire Synchronous (Sync-Wire) Communication Wiring Information" or "2-Wire Digital Communication Wiring Information" for additional details, depending on your system.

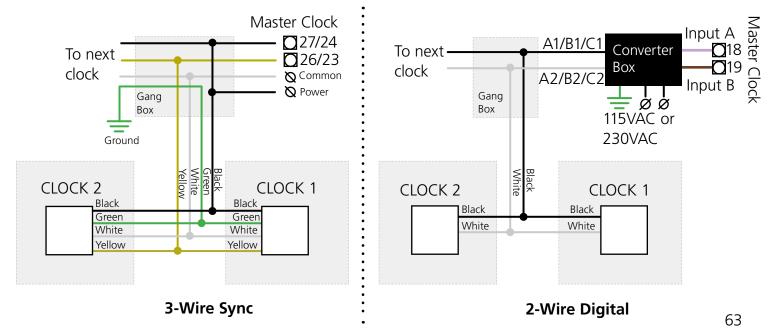




15) Remove the gearbox pins, then attach a power connector to the ports on the side of each movement.

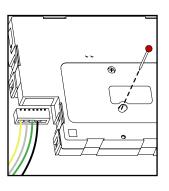

3-Wire Sync






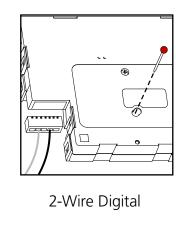





16) Loosen the strain relief by unscrewing the two screws. Slip any excess wiring through them, then tighten the strain relief by reinserting and tightening the screws.

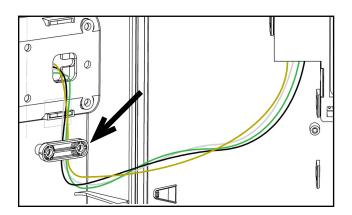

17) Slide both clocks back into their housings. You should hear a snapping noise as the latches reengage.

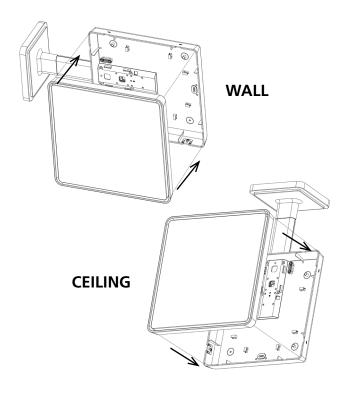

18) If you feel the need to detach the clock from the housing after the installation has been completed, use a flat-blade screwdriver on the four slots around the outside of the housing. You may hear a snapping noise as the internal latches disengage.

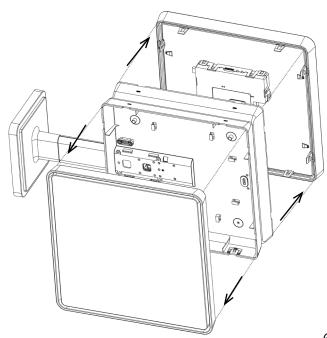




Legacy Housing


Some models of the Flag Mount or Double Mount clock use a different housing. These housings mount to the wall the same way as the other model, but use a different method for attaching and removing the clock. For these variants, conclude with the following instructions:

Applicable housing parts: SAB-4BD-16R-0M

1) Remove the outer adapter screws, then slide each clock onto the adapter in the rotation that you wish it to be viewed. You should hear a snapping noise as the four clips on the adapter secure the clock in place. Insert the screws again to complete the installation.

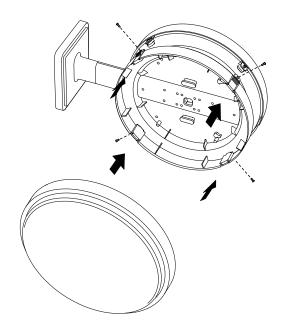


2) If you feel the need to detach the clock from the housing after the installation has been completed, remove the outer adapter screws, press down on the latches, and gently pull on the rim of the clock until the clock detaches.

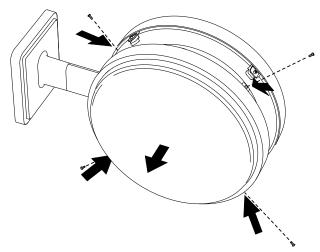





Wiring Information - 2-Wire Digital Communication

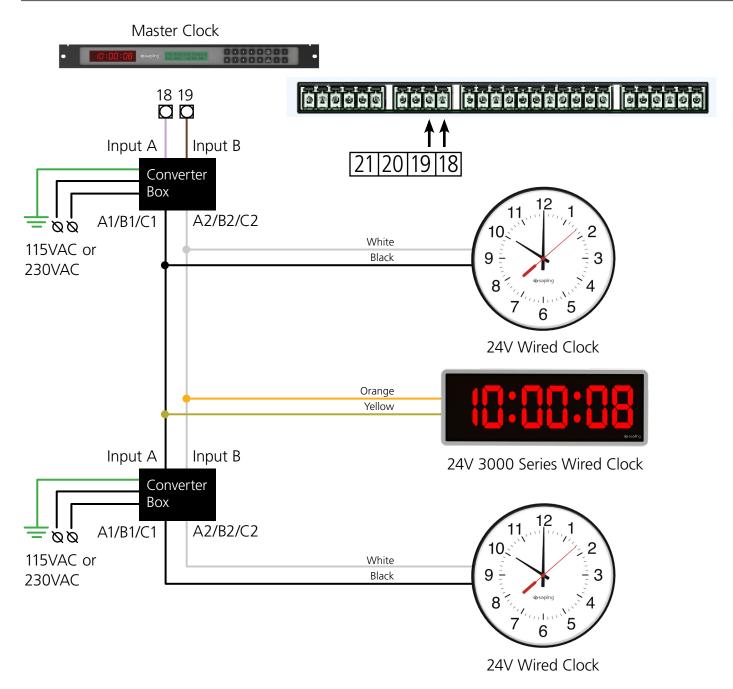


When replacing old converter boxes with new ones, the following values are equivalent:

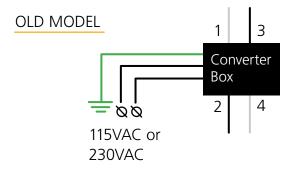

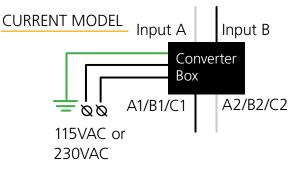




Wiring Information - 3-Wire Synchronous (Sync-Wire) Communication 115/230VAC

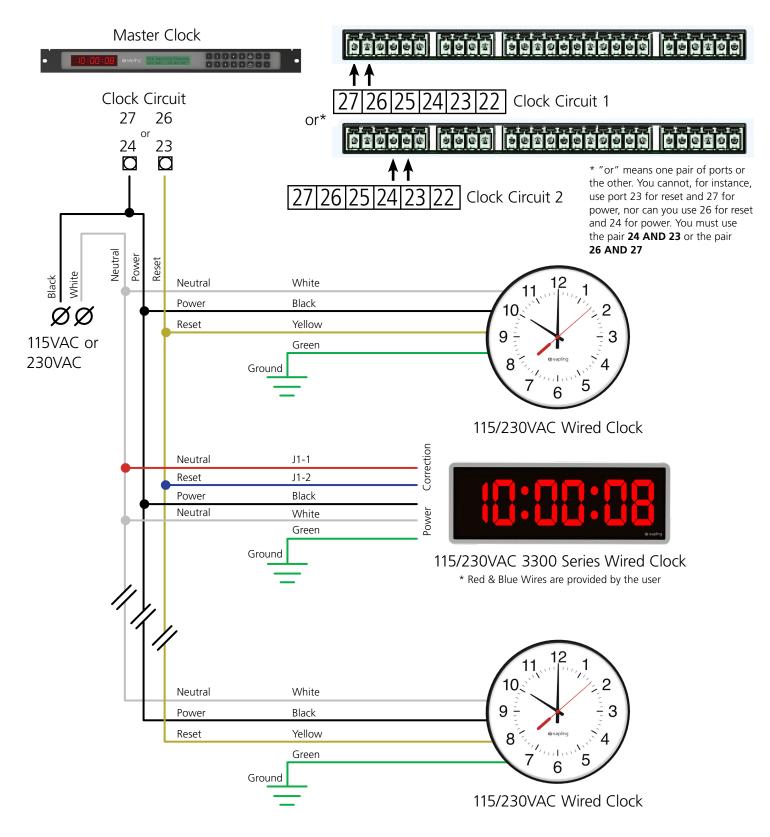



Wiring Information - 3-Wire Synchronous (Sync-Wire) Communication 24VAC

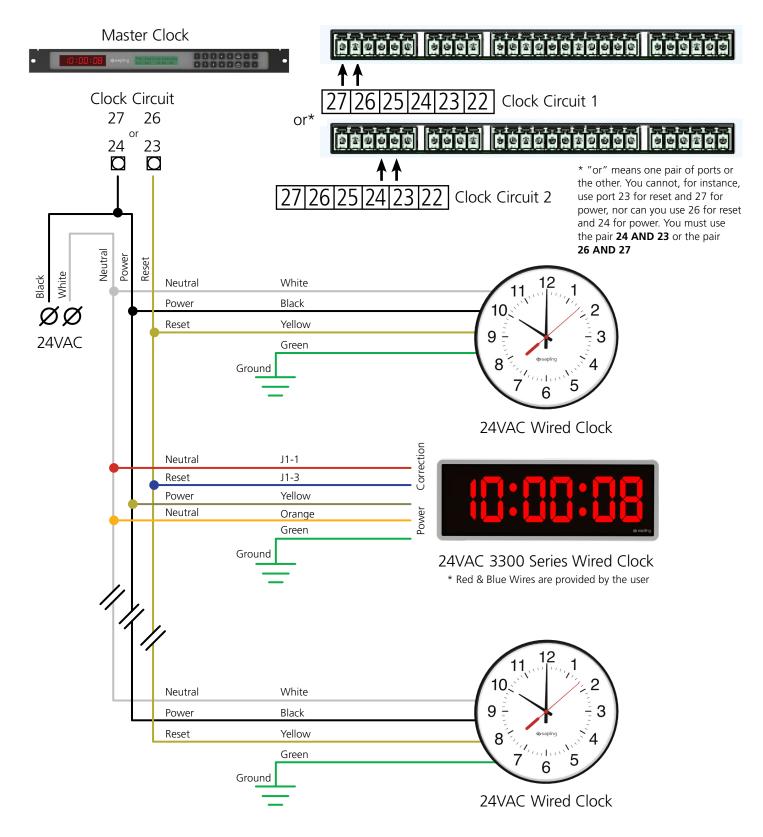



P. (+1) 215.322.6063 F. (+1) 215.322.8498 www.sapling-inc.com



Frequently Asked Questions

How do I know if the clock is receiving data?

Perform Diagnostic 2. See the section labeled "Diagnostic Test #2 - Comprehensive Test". The result should correspond to your system's synchronization settings.

Example 1: The two-wire digital system should result in the clock receiving communication within the last hour.

Example 2: Once-a-day sync systems may return a result of 11 hours or more, depending on when you conduct the test. In this case, the test should be conducted less than nine hours after the synchronization signal is sent.

What size utility/gang box is needed?

A standard single gang box is required for wall mounting a clock. However, if you are installing a double mount or flag-mount clock, then a standard double gang box is required.

Do I need to power up all the clocks at the same time?

No. Clocks that are added to the system after power up will begin running and wait for correction signals from the master clock. Sync-wire systems may take up to 24 hours to receive a correction signal.

Is this series of analog clocks easily interchangeable with the SAA Series analog clocks?

Yes. This model is designed to be compatible with SAA clocks. Call tech support for wiring instructions.

Do I have to reset the clock if it suffers a power outage?

No. The clock will resume operation after the power outage, and will adjust to the correct time as soon as it receives a signal from the master clock.

What happens if I power the clock before connecting the master clock?

The clock will begin to run, but the time displayed will be incorrect. As soon as signal wires from the master clock are connected and a synchronization signal is sent, the clock will correct itself to display the correct time.

Can I manually set the time on the clock?

No. Furthermore, attempting to open the front crystal or moving the hands manually will damage the clock and void your warranty.



Questions about Protocols

How do I set up the clock to accept synchronization protocols from Rauland, Dukane, and other systems?

If you are receiving the protocol directly from the master clock, your clock will automatically detect the sync-wire protocol being used when it first powers up; no action on your part is required.

If you wish to use this system's 2-wire digital protocol to carry synchronization data from another system that uses an unsupported protocol, a 2000/3000 Series Master Clock must be used as an adapter between the two wiring systems. Consult the wiring guide in your master clock manual for more information.

How do I select which protocol I want my clock to use?

When you power up the clock, your clock will automatically recognize the protocol being used as soon as it receives data.

Can I change protocols if the system is running?

Yes. There are two ways of doing this:

- 1) Do nothing. Within three days of being plugged into the new protocol, the clock will automatically notice the change in protocol and correct itself.
- 2) Reset the clock to manufacturer's default. Perform Diagnostic #3, then, after Diagnostic #3 is complete, power cycle the clock.

How do I check to confirm that the clock is receiving the correct protocol?

Perform Diagnostic #1

How do I perform diagnostic tests on the clock system?

See the sections on the pages labeled "Diagnostic Test #1 - Protocol Verification", "Diagnostic Test #2 - Comprehensive Test", or "Diagnostic Test #3 - Manufacturing Default", depending on your needs.

I am adding a new clock to an existing system. Do I have to set my entire system back to 12:00?

No. This model of the clock will automatically correct itself upon receiving the data signal from the master clock.



Troubleshooting

The clock is plugged into the power, but it is not running. What should I do?

- A) Make sure that the movement's gearbox pin is removed.
- B) Make sure that the ground wire is not touching other wires.
- C) Make sure that the transformer is an isolated transformer if using a 24 volt model.
- D) Measure the voltage between the power (black) wire and the neutral (white) wire. The voltage between the white and black wires should measure 105-126 volts AC in the 115 volt model, 207-253 volts AC in the 230 volt model, or 21.5-26.5 volts AC in the 24 volt model.
- *Failure to follow instructions c and d can result in a blown fuse.

The clock is not receiving a communication signal from the master clock. What should I do?

Follow these steps in order:

- 1) In order to check the last time the clock received communication from the master clock, perform Diagnostic #2. See the section labeled "Diagnostic Test #2 Comprehensive Test"
- 2) Compare the time that the last signal was received to the parameters of your protocol. If the amount of time since the last signal was received is more than the amount of time since the clock last received time data, then there is a fault with the system.
- 3) Check your master clock and confirm that it is sending time data at the correct protocol and at the correct time. Consult your master clock manual for more information.
- 4) If your master clock has been properly configured, take the clock off the wall and test it at a location close to the master clock's signal output (or the converter box signal output, if a 2-Wire Digital System is being used). Use the master clock to send time data to the clocks.

If the clock corrects itself, then there was a problem with the wiring to the clock's original installation point, and the wiring must be repaired or replaced.

If the clock still fails to correct itself, contact tech support.

I can hear data noise bleeding into the intercom line. What should I do?

Reduce the transmission rate from the master clock to once a minute. Please refer to the master clock manual for information on how to change the transmission rate.



P. (+1) 215.322.6063 F. (+1) 215.322.8498 www.sapling-inc.com




Diagnostic Test #1 - Protocol Verification

The purpose of Diagnostic #1 is to tell the user which protocol the master clock is using to communicate with the secondary clock.

Diagnostic #1 may be enabled by pressing the diagnostic button once. If the clock is performing this diagnostic, the Diagnostic LED will flash green once every three seconds. It will continue to flash once every three seconds until the diagnostic is complete. The clock will confirm that the diagnostic is complete when the LED shines a different color.

If the LED is shining a solid green:

The Diagnostic was completed successfully. The second hand on the clock will move to a specific second on the dial. Each second corresponds to a particular protocol and polarity:

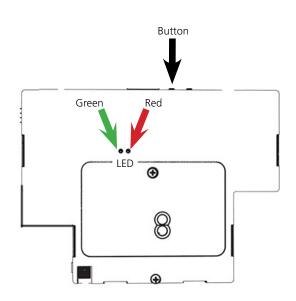

Second Hand Position Protocol and Polarity Detected

2 seconds	2-Wire Digital Communication, Polarity 1
4 seconds	2-Wire Digital Communication, Polarity 2
6 seconds	3-Wire Digital Communication, Polarity 1
8 seconds	3-Wire Digital Communication, Polarity 2
10 seconds	RS485 Communication, Polarity 1
12 seconds	RS485 Communication, Polarity 2
14 seconds	59 Minute Correction, Correct Polarity
16 seconds	59 Minute Correction, Reverse Polarity
18 seconds	58 Minute Correction, Correct Polarity
20 seconds	58 Minute Correction, Reverse Polarity
22 seconds	National Time/Rauland Correction, Correct Polarity
24 seconds	National Time/Rauland Correction, Reverse Polarity

The second hand will remain on this number for 3 minutes, and then the clock will revert to displaying the accurate time.

If the LED is flashing red:

A comprehensive test is required. Please perform Diagnostic #2



Diagnostic Test #2 - Comprehensive Test (All Other Clocks)

The purpose of Diagnostic #2 is to test the Movement gearbox and electrical components of your clock.

Diagnostic #2 may be enabled by pressing the diagnostic button twice. If the clock is performing this diagnostic, then a green LED on the movement will flash twice every three seconds. It will continue to flash twice every three seconds until the diagnostic is complete.


If the LED is lit a solid green:

The second hand will display the protocol and polarity that was detected. See the table on the previous page for details.

The minute hand will display the software version number.

If the LED is flashing red:

The hour hand will display how much time has passed since the clock last received a communication signal:

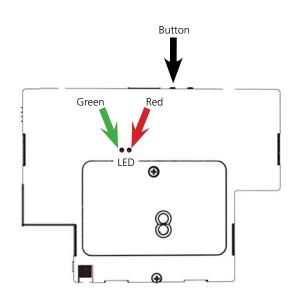

Hour Hand Position	Time Since Clock Last Received Communication
12	Clock received communication within the last hour.
1	Clock received communication between 1 and 2 hours ago.
2	Clock received communication between 2 and 3 hours ago.
3	Clock received communication between 3 and 4 hours ago.
4	Clock received communication between 4 and 5 hours ago.
5	Clock received communication between 5 and 6 hours ago.
6	Clock received communication between 6 and 7 hours ago.
7	Clock received communication between 7 and 8 hours ago.
8	Clock received communication between 8 and 9 hours ago.
9	Clock received communication between 9 and 10 hours ago.
10	Clock received communication between 10 and 11 hours ago.
11	Clock received communication more than 11 hours agoMay signify a manufacturer default.

The clock hands will remain on these numbers for 3 minutes, and then the clock will revert to displaying the accurate time.




Diagnostic Test #3 - Manufacturing Default

The purpose of Diagnostic #3 is to bring the clock back to 12:00:00 and reset to the manufacturer's default.

Diagnostic #3 may be enabled by pressing the diagnostic button three times. If the clock is performing this diagnostic, then a green LED on the back will flash three times with a five second break between each flash. The LED will continue to flash green until the diagnostic is complete.

If the LED is flashing red:

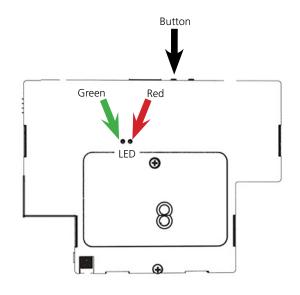

Number of Red Flashes Error Message 1,2 Error detected in second hand. Confirm that hands are not hitting each other, then repeat the test. 3,4,5 Error detected in the minute or hour hand. Confirm that hands are not hitting each other, then repeat the test. 6,7,8 Call tech support.

If the LED is a solid green and all of the clock hands are pointing to 12, the test was completed successfully. At the end of Diagnostic three, the clock hands will be set to 12:00:00. It will not resume normal operation until power to the clock has been turned off and on again.



P. (+1) 215.322.6063 F. (+1) 215.322.8498 www.sapling-inc.com



Warranty

Sapling Limited Warranty and Disclaimer

The Sapling Company, Inc. warrants only that at the time of delivery and for a period of 24 calendar months after delivery or the period stated in this invoice, if different, the Goods shall be free of defects in workmanship and materials, PROVIDED that this warranty shall not apply:

To damage caused by Buyer's or any third party's act, default or misuse of the Goods or by failure to follow any instructions supplied with the Goods.

Where the Goods have been used in connection with or incorporated into equipment or materials the specification of which has not been approved in writing by The Sapling Company, Inc.;

To Goods which are altered, modified or repaired in any place other than a Sapling Company, Inc. factory or by persons not expressly authorized or approved in writing by The Sapling Company, Inc.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WITH RESPECT TO GOODS DELIVERED UNDER THIS CONTRACT, WHETHER EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. The foregoing warranty runs only to Buyer. There are no oral or written promises, representations or warranties collateral to or affecting this contract. Representatives of The Sapling Company, Inc. may have made oral statements about products described in this contract. Such statements do not constitute warranties, shall not be relied on by Buyer and are not part of the contract.

Note: An extended 5 year (60 month) warranty is also available at the time of the system purchase with a surcharge.